



CHiNT

iDW131

Wi-Fi Smart Power Sensor

Quick Guide

Issue :001-01
Date :2024-12




ZTW0.464.0382EN

1 Overview

1.1 Models

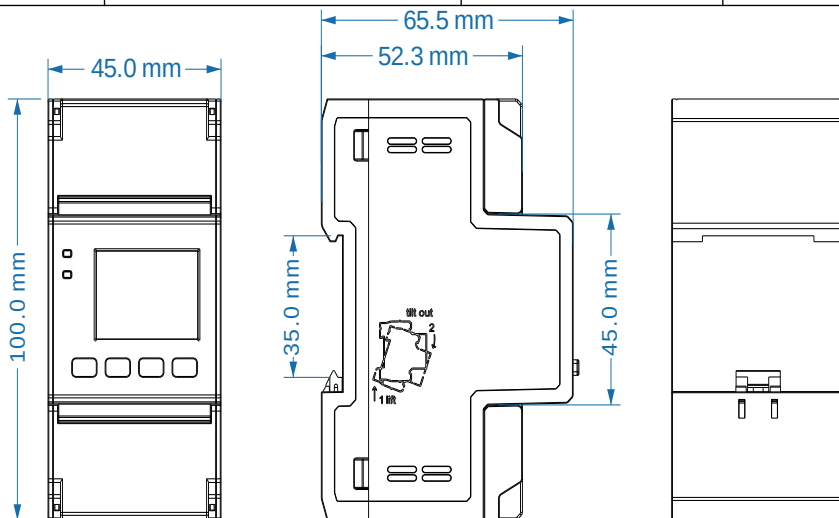Type	Width(18 mm module in Din rail mounting)	Dimension (L*W*H)/mm	Net weight/g
iDW131	2.5	100×45×65.5	Approx. 143.5



 **NOTE** Unmarked tolerance is $\pm 1\text{mm}$;
The appearance, dimensions information please refer to the actual product received.


1.2 Performance and Specification

Category	iDW131
Nominal voltage	220V...240V
Nominal current	100A/40mA, 250A/50mA, 100A/333mV, 250A/333mV (customizable)
Frequency	50/60Hz
Voltage range	0.8Un-1.15Un
Accuracy class	Class B
Power grid system	single phase
Wi-Fi protocol	802.11b/g/n
Bluetooth protocol	5.0
Temperature	-25°C~+55°C(nominal), -40°C~+70°C(ultimate)
Way to install	DIN-Rail Mounting


1.3 Current transformer(CT)

Type	Cable length/mm	Net weight per CT/g
100A/40mA	6000 ± 20	Approx. 79
100A/333mV		
250A/50mA		Approx. 162
250A/333mV		

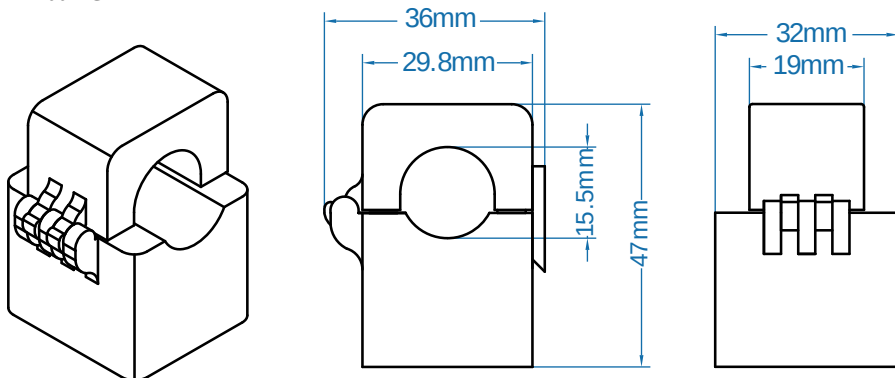• 100A CT



• 250A CT

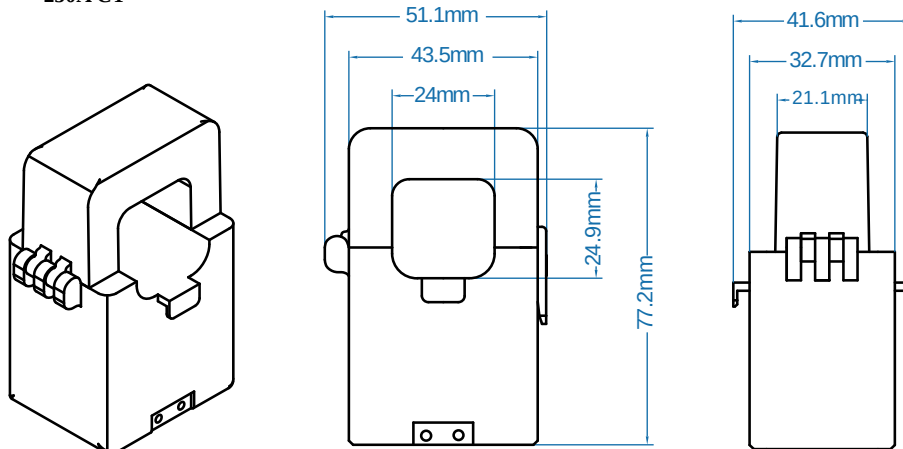


NOTE

The dimensional tolerance is $\pm 1\text{mm}$;

The appearance, size and information are subject to actual objects.

The maximum tensile force of each CT cable is 15N m. Press the buckle of the CT assembly connector and pull out.

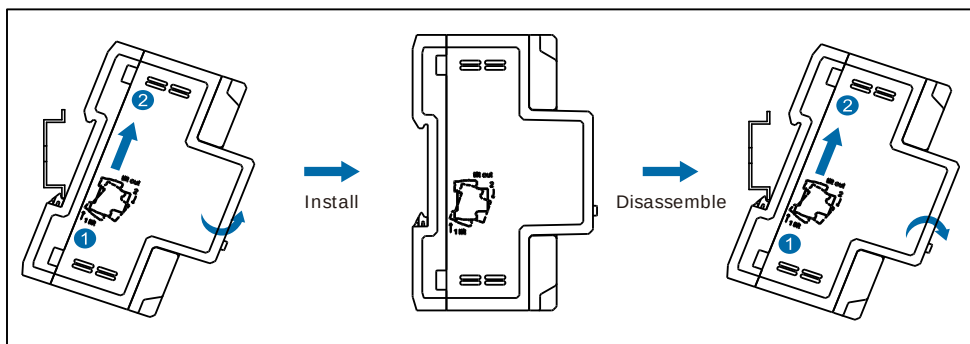2 Installing



3 Installing the Cable


3.1 Prepare cables

Cable	Port	Type	Conductor Cross-sectional Area Range	Outer Diameter	Source
AC power cable	L	Multi-core outdoor copper cable	$1.5\text{mm}^2 \sim 2.5\text{mm}^2$	3mm~5mm	Prepared by the customer
	N				
CT cable	I1*、I1	/	/	/	Manufacturer
	I2*、I2				
Communication cable	RS485	Two core outdoor shielded twisted pair	$0.25\text{mm}^2 \sim 1\text{mm}^2$	4mm~11mm	Prepared by the customer
	RS485(RJ45)	Cat 6 Ethernet Cable	/	/	

NOTE The maximum torque for terminals L, and N is $0.5\text{N} \cdot \text{m}$, and the recommended torque is $0.45\text{N} \cdot \text{m}$,
The recommended stripping length for communication cables and voltage cables is 7mm.

3.2 Wiring diagram

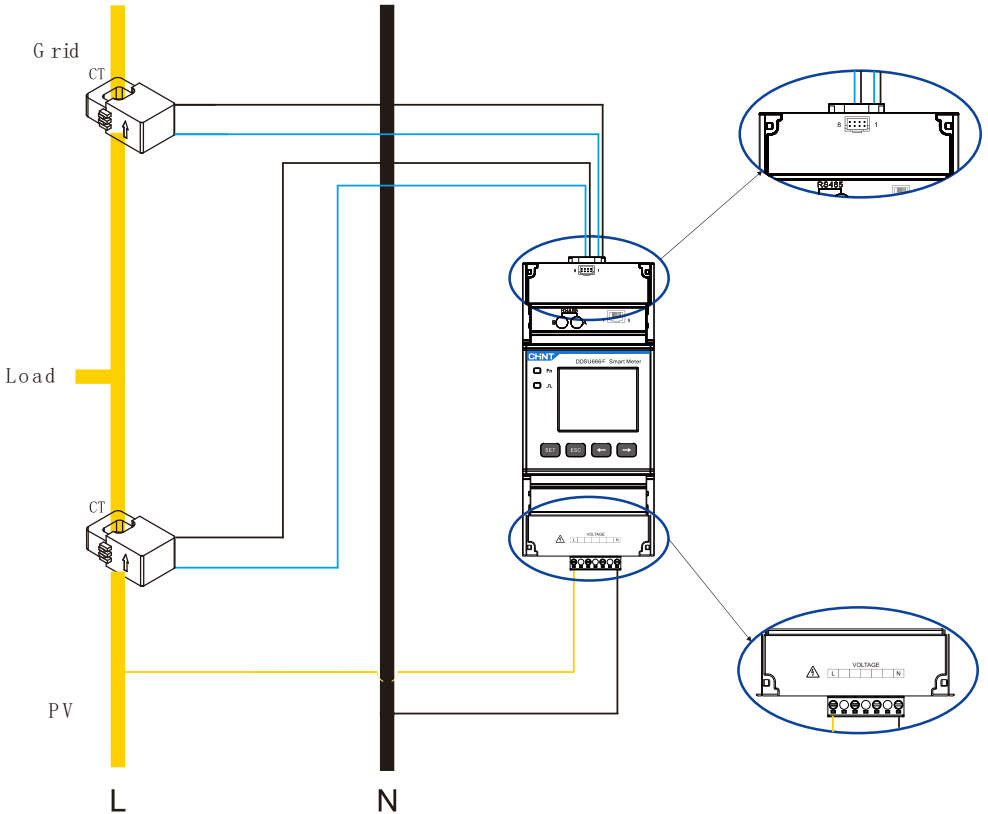
- Single phase dual CT, 'nEt' = n.12



 CAUTION

Before connecting cables, ensure that the Smart Meter is not damaged in any way; Please ensure that the grounding wire is securely installed; Before powering on, please ensure that the wiring is correct, otherwise electric shock, damage to the smart meter, or fire may occur.

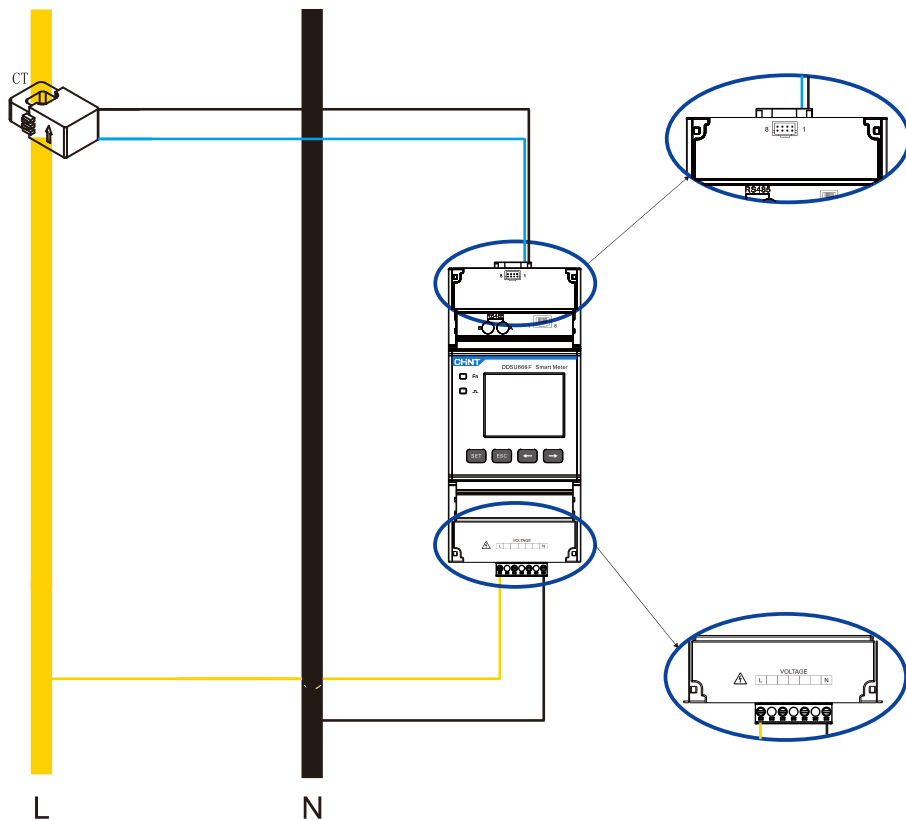
- Single phase single CT, 'nEt' = n.12



NOTE

'nEt' value need to be checked after connection complete. Refer to section 4 'Display and Parameter Settings' for details,

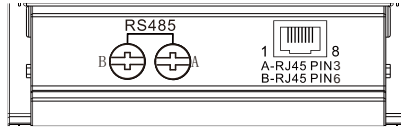3.3 Communication Connection




- **RS485**

There are two types of connection interfaces. Screw type and RJ45 type. The default A is PIN3 and B is PIN6 in RJ45. Please note that the customer's customized requirements shall be subject to the actual product.

4 User Interface

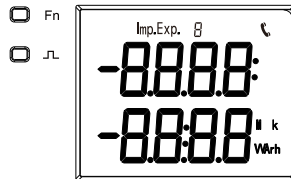4.1 LED and LCD overview



 **NOTE** The figure above is for reference only, please refer to the actual product received.

- **LED**

“” indicates energy pulse respectively; “Fn” is a red blue dual color function indicator light.

No.	Description	Light Status
1	STA connection	The blue light is always on
2	AP connection	The red light is always on
3	AP and STA connection	The blue and red lights are always on
4	Sending data	The red light is flashing
5	Receiving data	The blue light is flashing.
6	AP and STA are not connected	Function light off





• LCD






No.	Symbol	Description
1	Imp.	Import direction
2	Exp.	Export direction
3		Flash during 485 communication
4		Unit (according to the display items)





4.2 Display

Press the “←” and “→” keys to switch the display items. The display items is listed in following table.

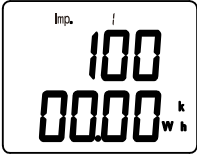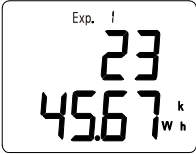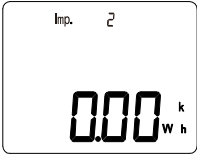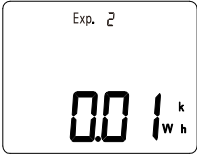The sequence and items is varied from product types, please refer to the actual product received.

No.	Display interface	Description
1		The total positive active power of the first channel =10000.00kWh
2		The total active power of the channel =2345.67kWh
3		The total positive active power of the second channel =0.00kWh
4		The total active power of the channel =0.01kWh

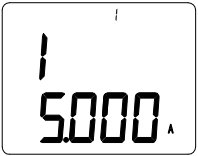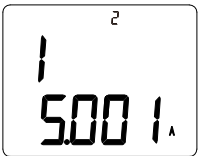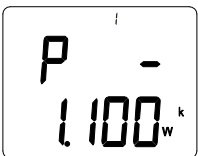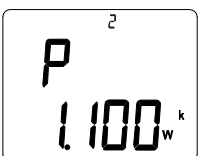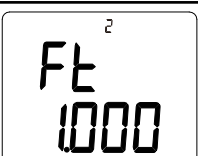No.	Display interface	Description
5		Voltage = 220.0V
6		First channel current= 5.000A
7		Second channel current= 5.000A
8		First channel active power= -1.100kW
9		Second channel active power= 1.100kW
10		First channel power factor = 1.000
11		Second channel power factor = 1.000

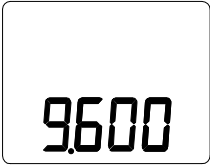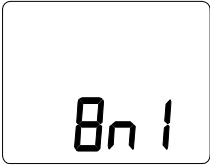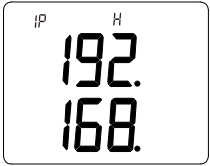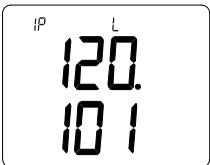No.	Display interface	Description
12		Frequency of the first loop =50.00Hz
13		RS485 is Modbus, and the communication address is 1
14		The baud rate of RS485 communication serial port is 9600bps;
15		RS485 communication serial port has 8 data bits, no checksum, and 1 stop bit
16		IP Address (Page 1)
17		IP Address (Page 2)

4.3 Parameter


Parameter	Value range	Description
Adr1	1~247	Communication serial port Modbus protocol communication address (485 serial communication and wireless module communication share this parameter)
bPS1	1.200; 2.400; 4.800; 9.600; 19.20; 115.2	485 communication serial port baud rate 1.200:1200bps; 2.400:2400bps; 4.800:4800bps; 9.600:9600bps; 19.20:19200bps; 115.2:115200bps
nEt	n.12;	Choose wiring method: n.12:Single phase;

 NOTE The parameters can be customized according to customer needs.

4.4 Parameter Setup

Button description: "SET" represents "confirm" or "cursor shift" (when entering digits), "ESC"

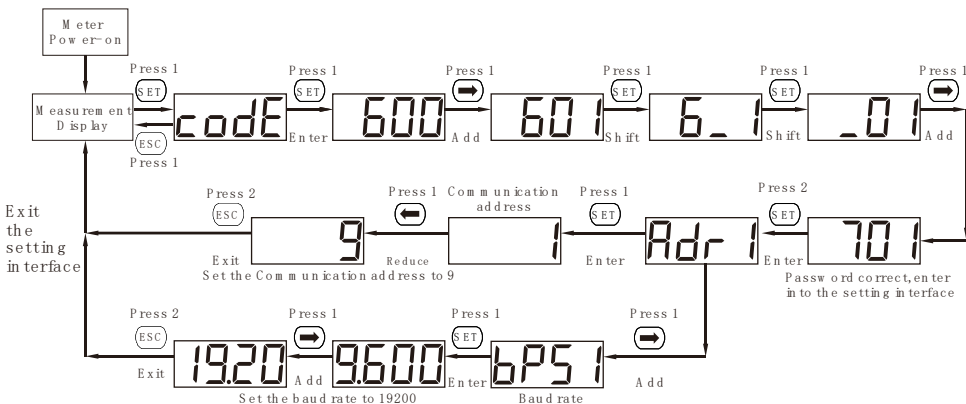represents "exit", " $\leftarrow$ " represents "reduce", and " $\rightarrow$ " represents "add". The password is **701** by default.



When modify digits, " SET " can be used as cursor shift button ; " → " is “ add ” button; " ESC "

represents exiting the setting interface or switch to the character interface from digit modification interface,

restarting adding from zero after setting the digits to be the maximum value.

 NOTE If the communication is abnormal, check and set parameters.

5 WiFi network configuration method

5.1 Configure network through Bluetooth

- ① Open the correct network configuration app
- ② Search for Bluetooth devices in the software and find the correct device
- ③ Connect the correct Bluetooth device and complete the security authentication process
- ④ Enter the SSID (required) and password (optional) in the distribution network interface to complete

the Wi Fi connection

The usual name for electric meter equipment is "ZT+SN"

 **NOTE** The maximum SSID input is 32 bytes, and the maximum password is 63 bytes. Only numbers, letters, and symbols are supported.

 **CAUTION** At present, the electricity meter only supports 2.4GHz frequency band WiFi

6 Diagnosis , analysis and elimination for common faults

Fault phenomenon	Reason analysis	Elimination
Abnormal RS485 communication	1. The RS485 communication cable is disconnected, short circuit or reversely connected. 2.The address, baud rate, data bit and parity bit of the instrument is not in accordance with the inverter. 3.The RS485 communication cable is not equipped with a matching resistor at the end (usually when the distance exceeds 150 meters); 4. Check whether external devices are reliably grounded; Note: The communication protocol command between the instrument and the host does not match.	1.If any problems for the communication cable, please change the cable. 2.Set the address, baud rate, data bit and parity bit of the instrument to be the same as the inverter through buttons and so as the "parameter setting". Note: If the communication distance exceeds 150 meters and the communication parameters between the instrument and the host are the same, but communication still cannot be achieved, please reduce the communication baud rate or add a 120 Ω resistor at the beginning and end of the communication cable (the resistance value can be adjusted according to the on-site conditions).

Fault phenomenon	Reason analysis	Elimination
No display after the instrument being powered on	1.Incorrect wiring mode. 2.Abnormal voltage supplied for the instrument.	1.If the wiring mode is incorrect, please connect based on the correct wiring mode (see the wiring diagram). 2.If the supplied voltage is abnormal, please supply the voltage on the instrument specification.
Connection to router failed	1.Wi Fi name or password input error. 2. The router does not support the 2.4GHz frequency band. 3. Not within the coverage range of the router signal. 4. The router has set MAC address filtering and the device is not on the whitelist. 5.,Incorrect use of equipment antenna.	1.Check if the Wi Fi name or password is entered incorrectly. Names can support up to 32 characters, passwords can support 8-63 characters, and Wi Fi names and passwords only support letters, numbers, and symbols. 2. Check if the router supports the 2.4GHz frequency band. Currently, the device only supports connecting to Wi Fi in the 2.4GHz frequency band. 3. Move the device within the signal coverage range of the router to avoid wall obstruction. 4. Check if the router has set MAC address filtering. If so, add the device's MAC address to the whitelist or disable the MAC address filtering function. 5. Check the position of the antenna and try to install it within the signal coverage range of the router, ensuring that the antenna segment is tightened. Do not disassemble or replace the antenna without authorization, as non original antennas may cause the device to malfunction.
Power metering inaccuracy	1.Wrong wiring, please check whether the corresponding phase sequence of voltage and current is correct. 2. Check whether the CT specification is correct. Note : Pa, Pb, and Pc are abnormal if the values are negative. (except for some special equipment).	1.For wrong wiring, please connect based on the correct wiring mode (see the wiring diagram). 2.If a negative value is displayed, change the cable connection mode of the current transformer to ensure that the high and low ends are connected properly.

7 Warranty and Service

The manufacturer implements three guarantees for product quality. Within 18 months from the date of delivery, if the user fully complies with the provisions of this manual and the factory seal is still intact, the instrument is found damaged during use, and the company is responsible for free repair or replacement.

8 Environmental protection

Dear customer:

Please help us do one thing, when this product at the end of its life, in order to protect our environment, please do a good job of recycling the product or its parts and materials. Please also dispose of materials that cannot be recycled. Thank you very much for your cooperation and support.

9 Statement

1. The products, services or features purchased by you are subject to the commercial contracts and terms signed with the Company, and all or part of the products, services or features described in this manual may not be included in the products purchased by you.
2. Except as otherwise agreed in the contract, the Company makes no representations or warranties, express or implied, about the contents of this specification.
3. The information in this brochure is subject to change without prior notice.
4. The Company shall not be liable for indirect losses arising from the provision, display or use of this material.

10 Manufacturer Information

Manufacturer	Zhejiang Chint IoT Technology Co.,Ltd.
Address	Wenzhou Daqiao Industrial Park, Beibaixiang Town, Yueqing City, Wenzhou City, Zhejiang Province, China
Tel.	+86-577-62877777
Service Hotline	+86-400-8177777
Anti counterfeiting complaints	+86-577-62789987
Website	http://aiot.chint.com
E-mail	ztwl@chint.com