





ALL-IN-ONE MICRO ESS

HYX-MS3000

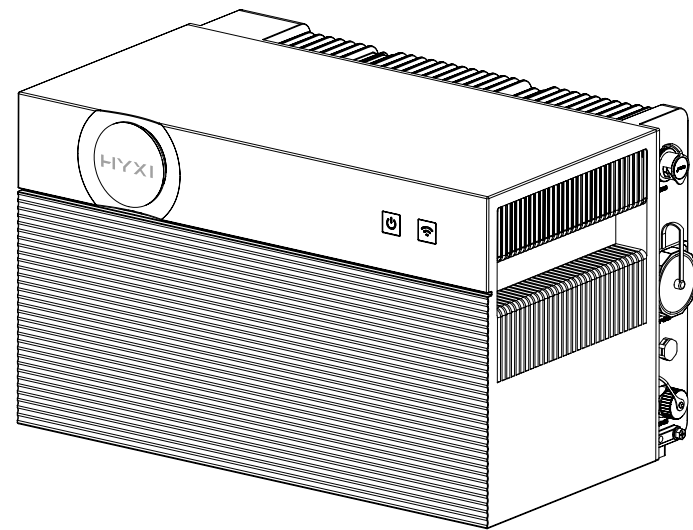


1 System Overview

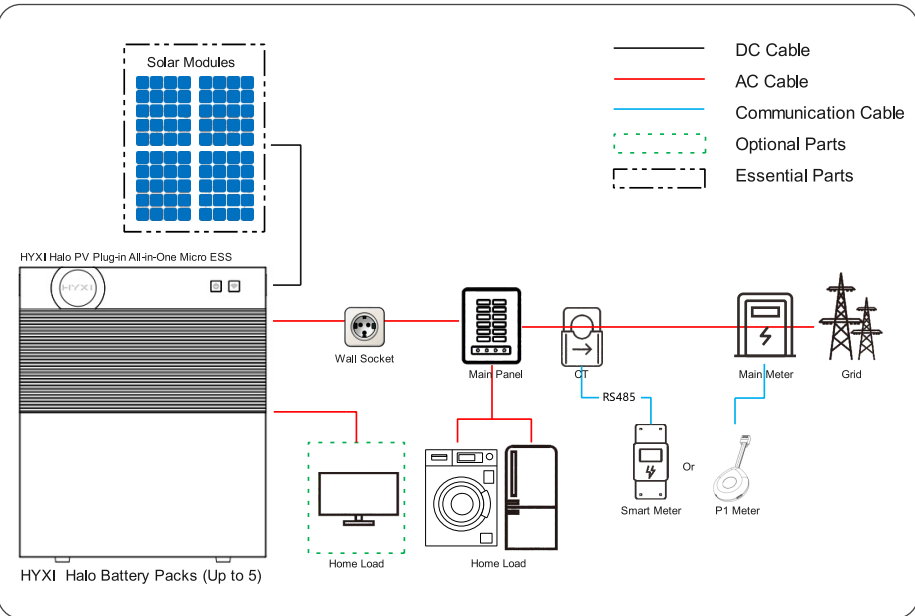

2 Inspection & Unpacking



2.1 Packing List of ALL-IN-ONE Micro ESS

Model: HYX-MS3000

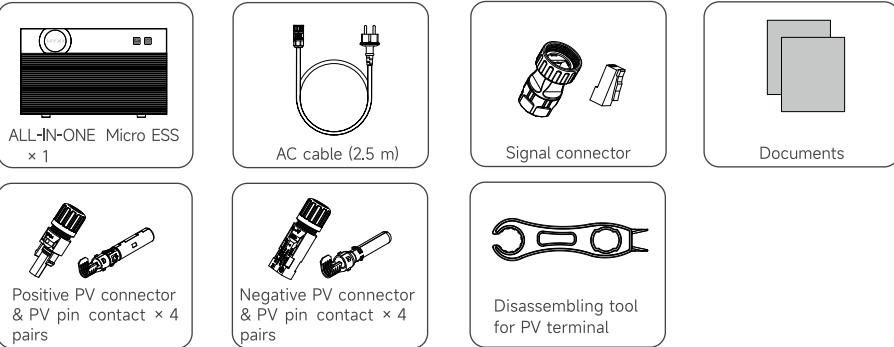

2.2 Packing List of Battery Pack


Model: HYX-MS3000B

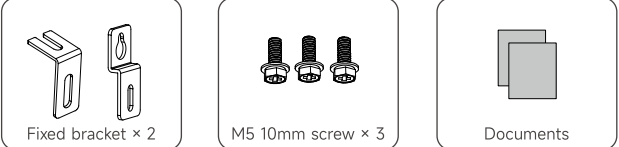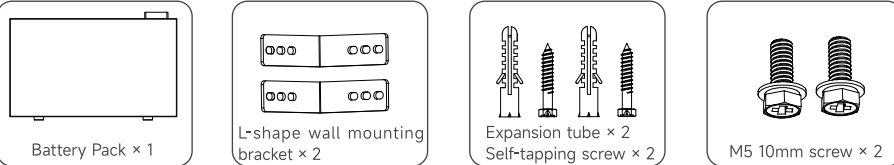


2.3 Optional Accessories

The following accessories can be ordered separately.


Single-phase smart meter

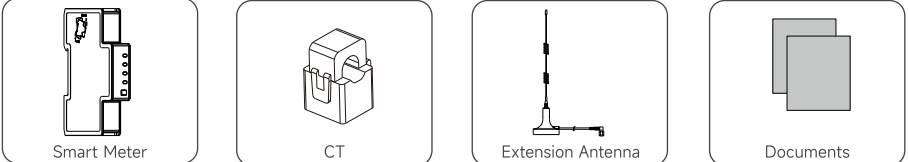

Three-phase smart meter

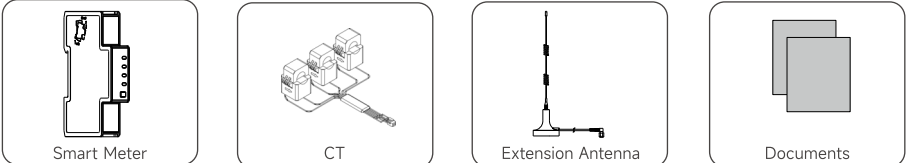


P1 meter

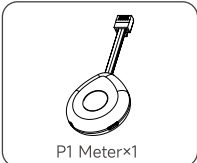


3 Product Overview

Plug-in ALL-IN-ONE Micro ESS

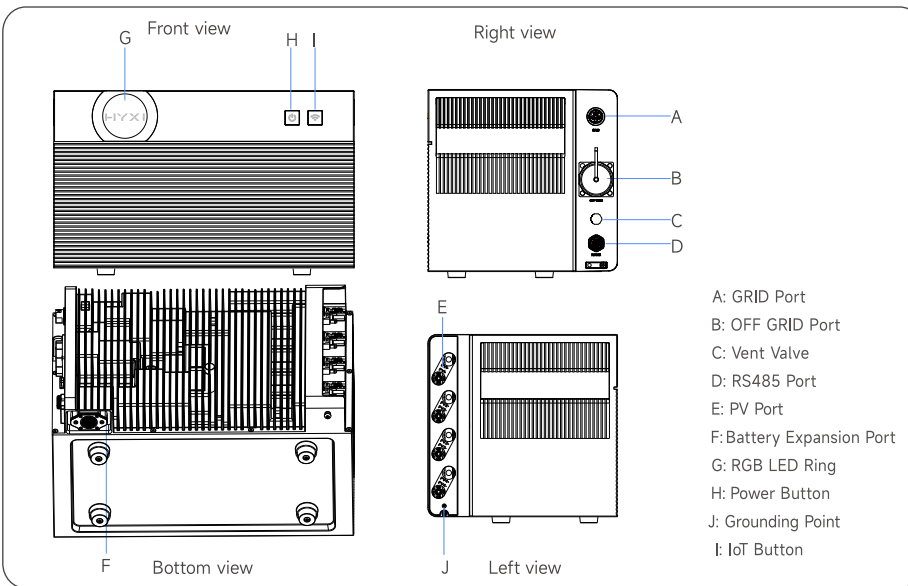

Battery Pack

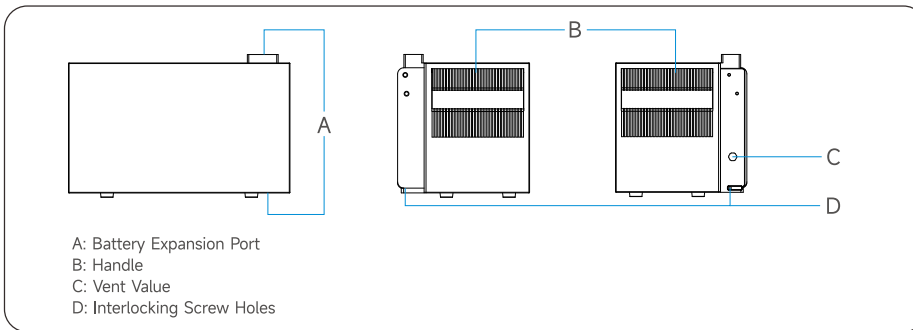


* This valve is a safety device. Do not operate or damage it.

4 Environment Requirements


- Read all instructions in the safety document before installation.
- Do not place the device near an area exposed to direct sunlight, fire, or explosive and flammable materials.
- Do not operate or damage it.

Ensure enough installation space.

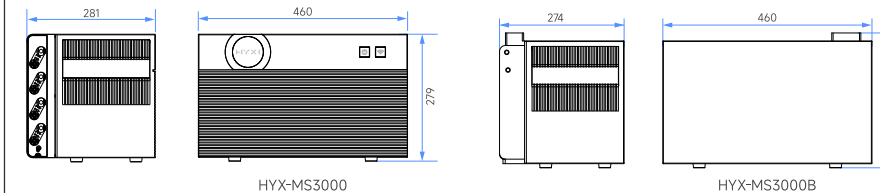


Ensure sufficient space for the Micro ESS installation and ventilation. Maintain a 20-50 mm wall clearance.

Ensure a good Wi-Fi signal.

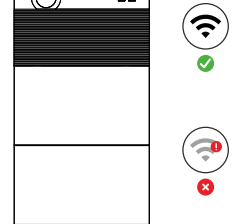

Place on a flat, hard surface.

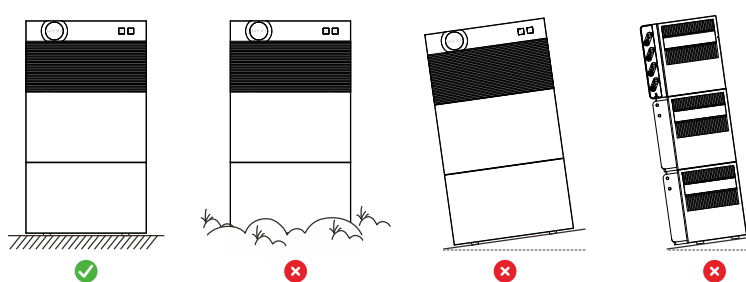

For Grid Connection Via Wall Socket

- Ensure the AC cable can reach both the socket and Micro ESS.

NOTICE

- Basic Mode: Identify a household circuit with a continuous current capacity of 16A. When Micro ESS is connected to this circuit, the system will default to a grid-tied configuration with 800W output.
- Professional Mode: To enable enhanced grid-tied power capabilities, connect Micro ESS via hardwiring or to a dedicated circuit.

CAUTION


- All applicable local electrical codes, safety standards, and regulations must be followed. Installation by a licensed electrician is strongly recommended to ensure compliance and reduce safety hazards or equipment damage.

5 Installation


NOTICE

- Ensure the device is off during installation.
- Ensure the heat sink on the back of the expansion battery pack faces the wall.
- When stacking one or more units, wall fixation is required to prevent tipping. A maximum of five units can be stacked.

Step 1: Get Tools Ready (Not Included in The Package)

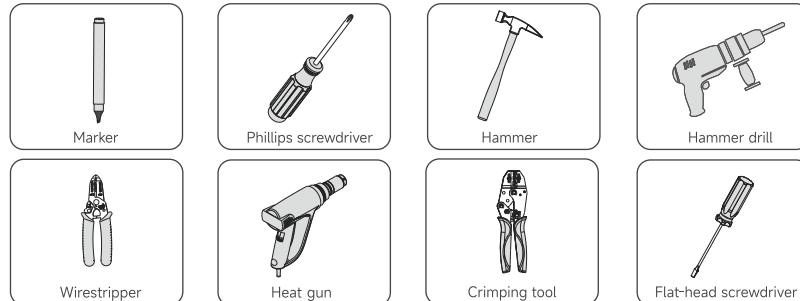


Step 2: Place the Bottom Battery Pack

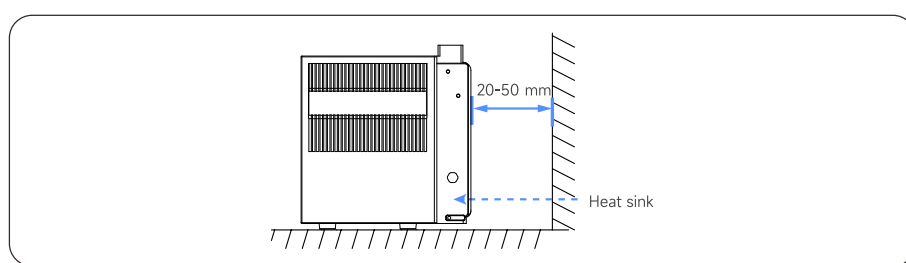


- For standalone installation (Micro ESS only): Position Micro ESS 20-50 mm from the wall. Skip steps 3-5.

Step 3: Stack Expansion Micro ESS and Battery Packs

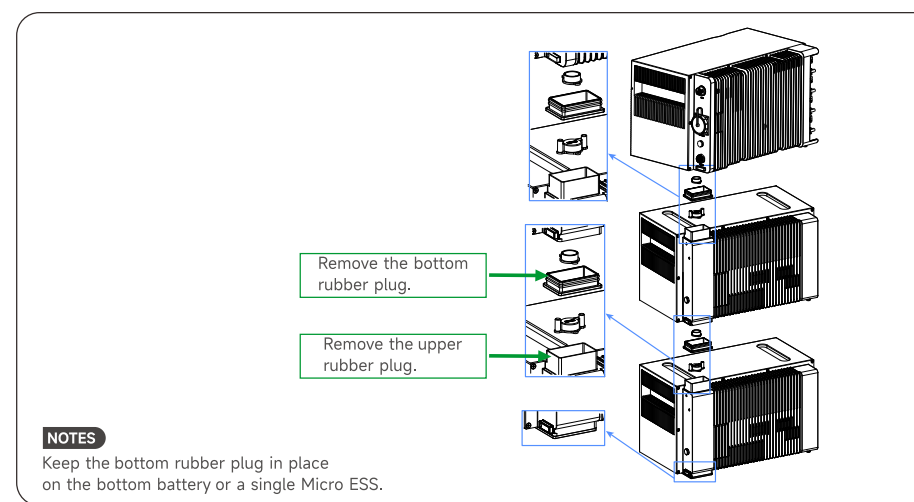

Step 4: Install Wall Mount Brackets

- Use M5 × 10 mm screw to secure the wall-mount bracket to the battery pack.
- Select and mark the mounting hole position.
- Let the bracket hang naturally.
- Drill a Ø8 mm hole to a depth of 60-65 mm.
- Insert the expansion tube.
- Fasten the wall-mount bracket to the wall.
- Install the self-tapping screw.
- Tighten the screws securing the battery pack.

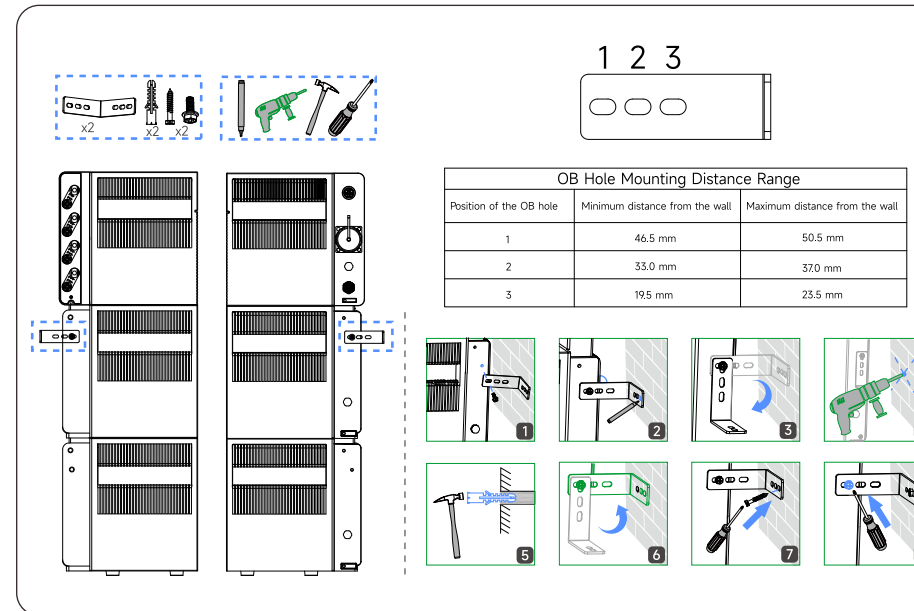


Step 5: Lock Micro ESS and Expansion Battery Packs

Left Side

1. Hook the upper slot of the left bracket onto the mounting screw.
2. Insert and tighten the fixing screw.


Right Side

1. Position the bracket and tighten the upper fixing screw.
2. Tighten the lower fixing screw.



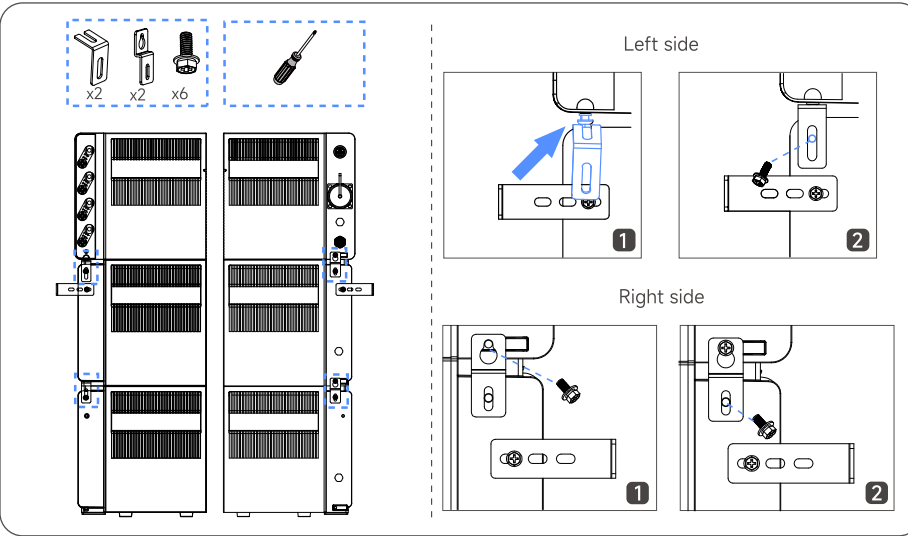


6 Electrical Connection


- **Step 1:** Grounding Connection
To avoid electric shock, connect Micro ESS to the ground.

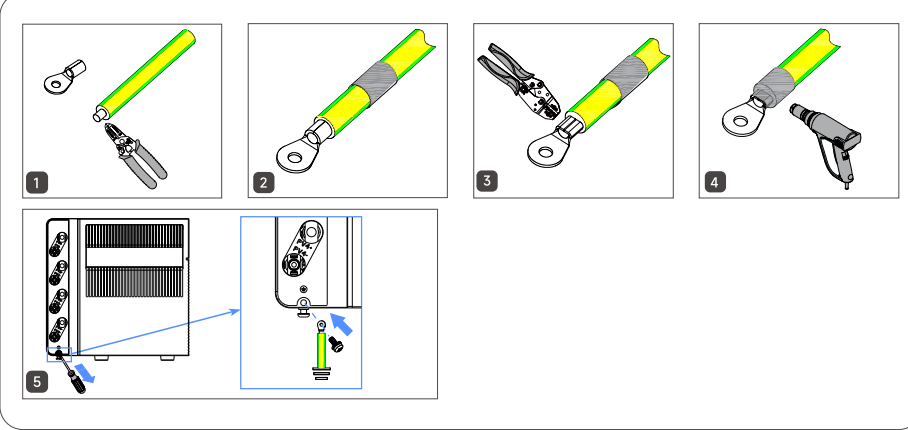


- **Step 2:** PV Connection
Connect each module directly to the same set of PV input ports.

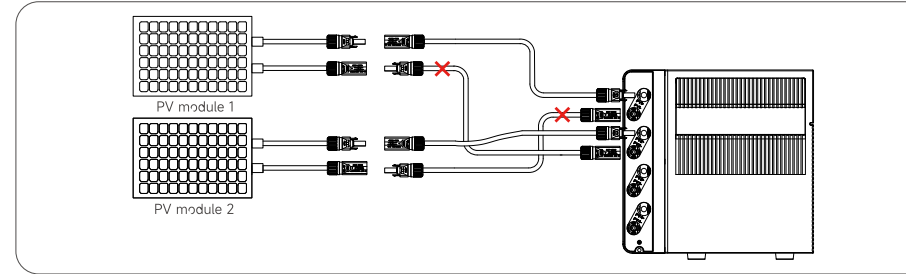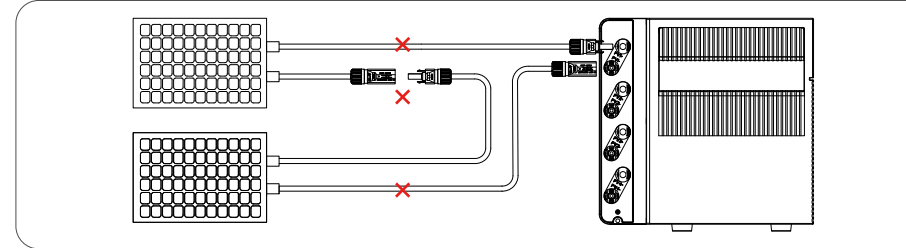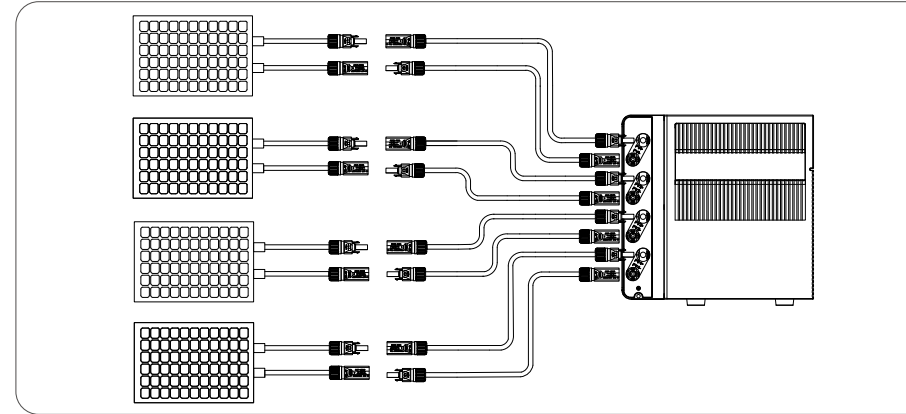


- **Disconnecting PV connector**
To disconnect the PV connectors, use the included disassembling tool for PV terminal.

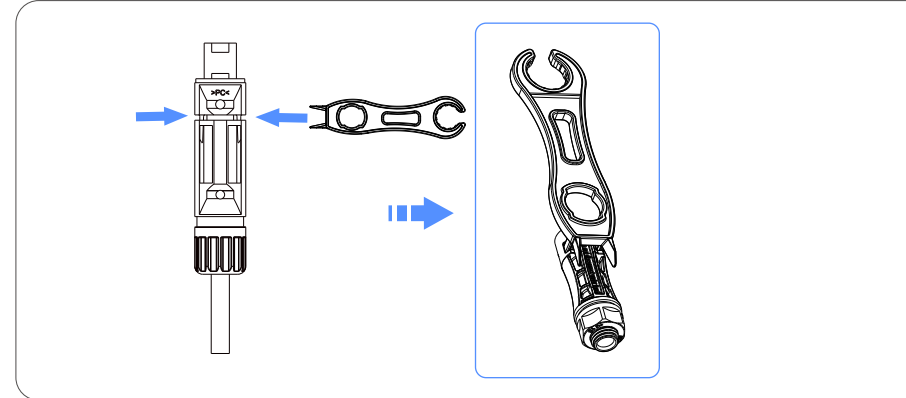


- **Step 3:** Connect to the Grid
Option 1: Via Wall Socket

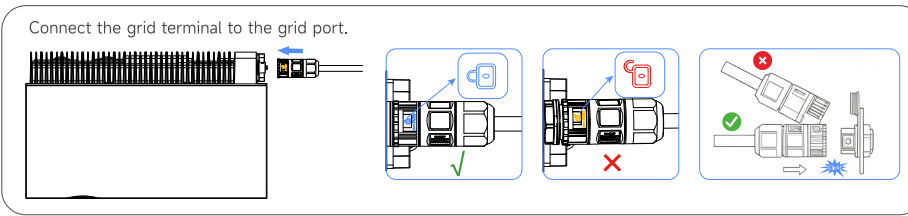

Connect All-in-One Micro ESS to a home outlet using the included AC cable (3 m).

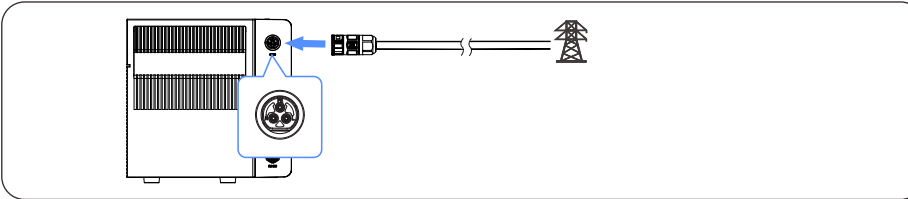

Removing the grid terminal (if required)

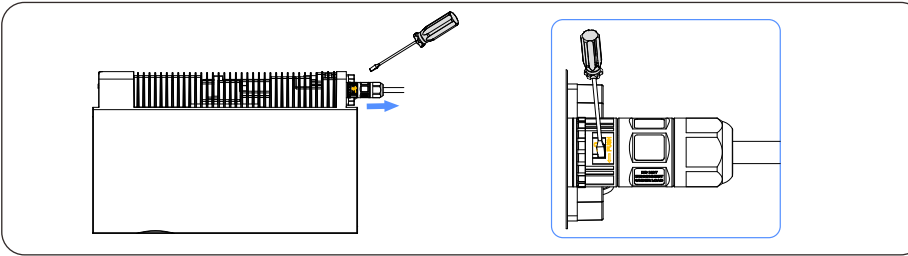


- Option 2: Via Main Panel
Installation must be carried out by a qualified electrician.


NOTICE

- Ensure the AC cable is firmly connected.
- To disconnect the AC cable, use a flat-head screwdriver to remove the grid terminal.

- **Step 4:** Connect to Your Home Load
Power your home load directly using the off-grid port.

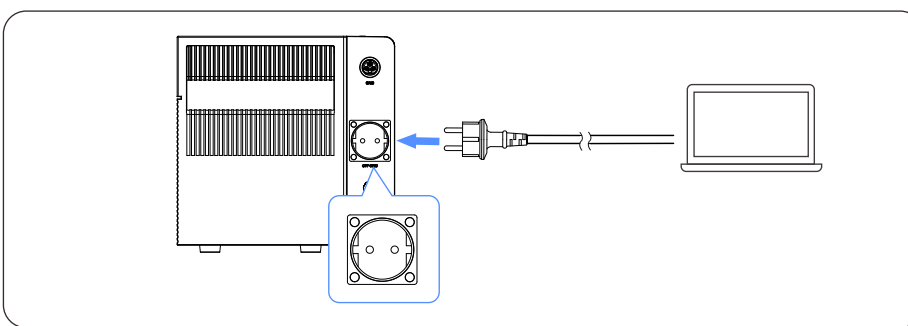

- **Step 5:** Install the Chint P1 Meter (Optional)
 - ① Plug the P1 meter into the P1 port on the main meter.
 - ② Connect the antenna of the P1 collector.
 - ③ The P1 meter is powered directly by the main meter. Check whether the P1 indicator light is on to confirm that it is powered properly.

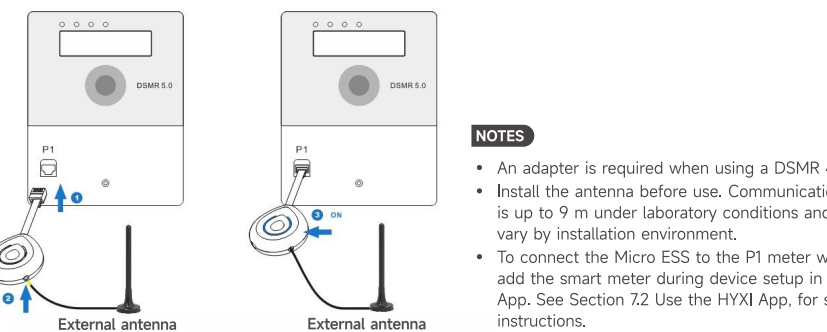

Scan the QR code to access detailed installation instructions.




- **Step 6:** Install the Chint Smart Meter.(Optional)

NOTICE

- Before installation, turn off the main breaker.
- Wiring must be performed by a licensed electrician.
- Wire colors may vary by country or region.
- If using a smart meter from another brand (e.g., Shelly), please refer to its installation manual for proper installation.
- To connect the Micro ESS to the smart meter wirelessly, add the smart meter during device setup in the HYXI App. See Section 7.2 Use the HYXI App, for setup instructions.

- **Single-Phase Connection**
Connect power cables (L, N) from the smart meter to the main panel. Install CTs on the solar and grid cables.

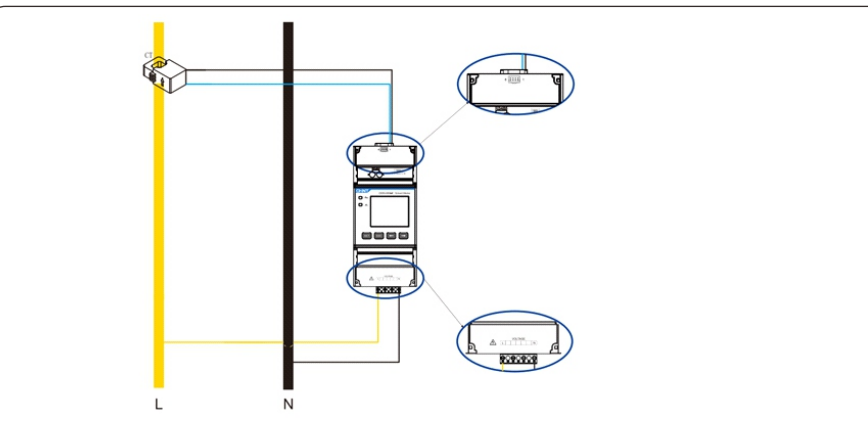


- Scan the QR code to access detailed installation instructions.



Three-Phase Connection

Connect power cables (L1, L2, L3, N) from the smart meter to the main panel. Install CTs on the grid cables. Make Sure the arrow on the CT rings are oriented towards the grid!

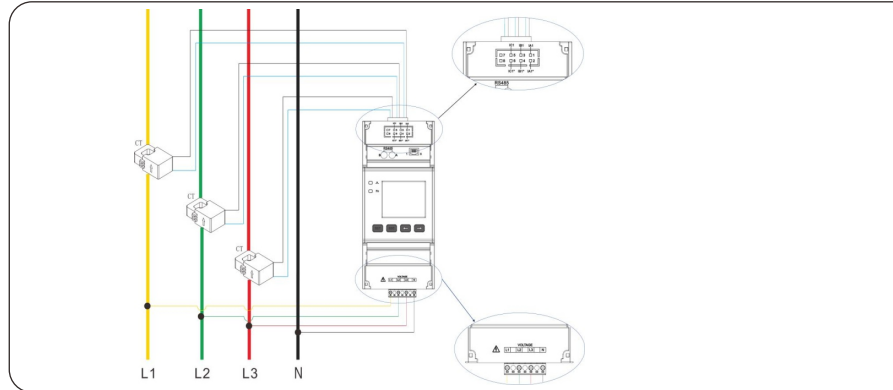


- Scan the QR code to access detailed installation instructions.



7 System Commissioning

7.1 Power On

Press the power button for 2 seconds until the display lights up. Micro ESS will automatically enter networking mode that the IoT button is flashing white. To turn off Micro ESS, press the power button for 5 seconds.

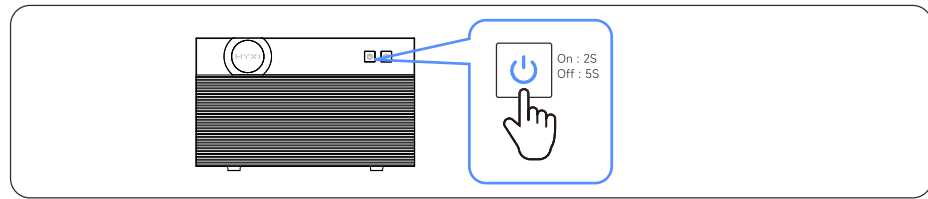

7.2 Use the HYXI APP

Step 1: Download and install the HYXI app.

Method 1

Download and install the HYXI App from the app store:

- App Store (iOS)
- Google Play

Method 2

Scan the QR code.



Step 2: Download and follow the instructions in the video or manual to complete the setup.

Access the materials via:

1. Visit our website at www.hyxipower.com and navigate to Service & Support > Installation Guide.
2. Scan the QR code to watch the guide video.



3. Scan the QR code to download the guide manual.



NOTICE

- Always connect the device to the original Wi-Fi network of the primary router for configuration and long-term operation.
- Do NOT connect the device to networks extended by Wi-Fi repeaters / Wi-Fi extenders. Such networks may cause network isolation, unstable data transmission and heartbeat disconnection, resulting in pairing failure, frequent offline issues, abnormal remote control and abnormal data reporting.
- Wi-Fi name (SSID) contains keywords such as EXT, _24G_EXT, _5G_EXT, Repeater. Even if the SSID does not have the above identifiers, it may still be an extender-based network, please do not judge solely by the Wi-Fi name.