

Three-Phase String Inverter Installation Guide S30K/S33K/S36K/S40K/S50K-T -General

Delivery and Service Center

品质

创新

高效

共赢

CONTENTS


01 Program Overview

02 Installation Preparation

03 Device Installation




04 App Configuration

Program Overview-Solution Overview

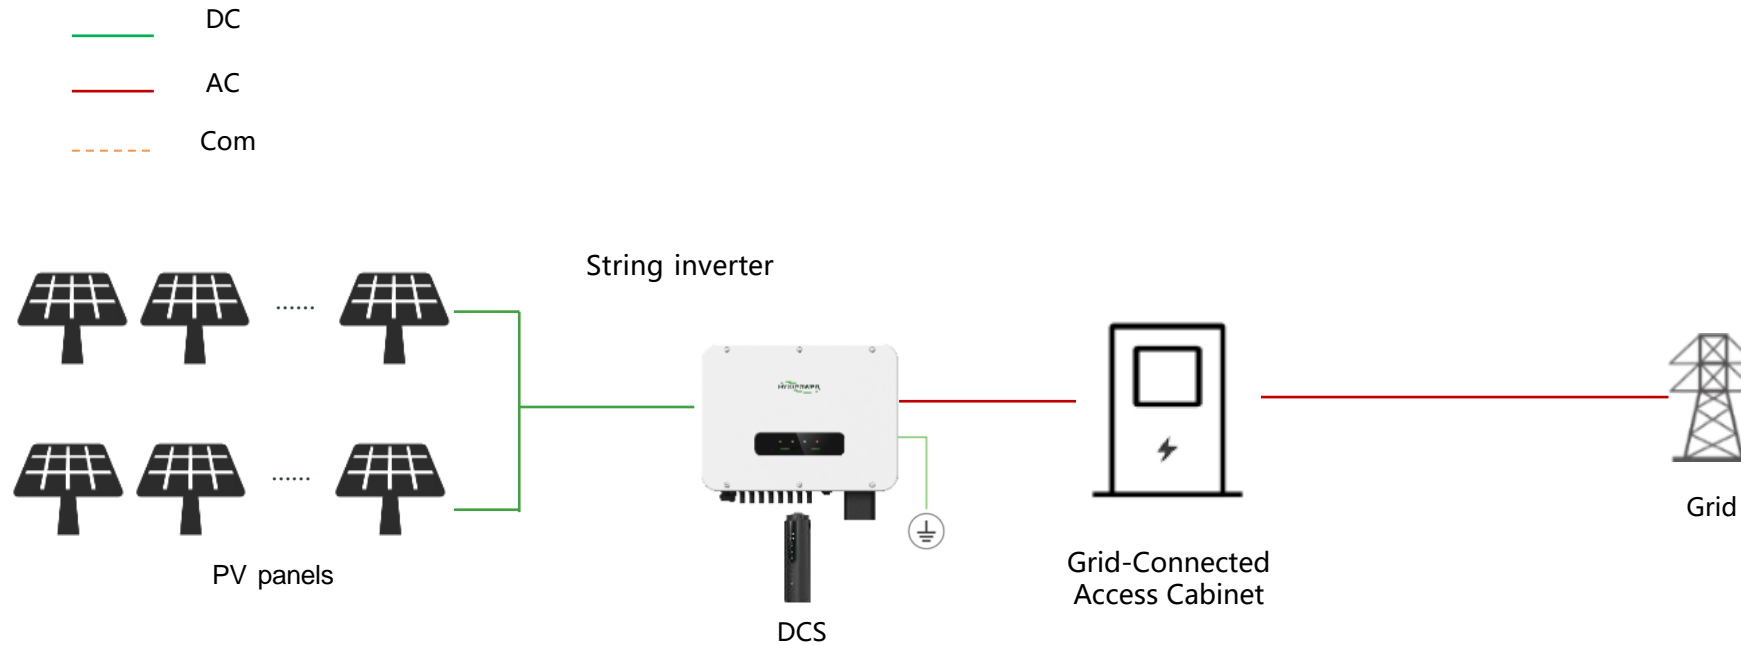

Before installation, conduct a site survey and, referring to the diagram above, plan the equipment installation positions and wiring scheme in advance.

Program Overview- Inverter Introduction

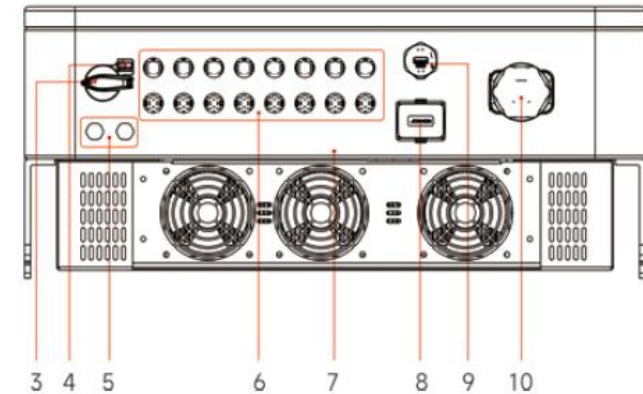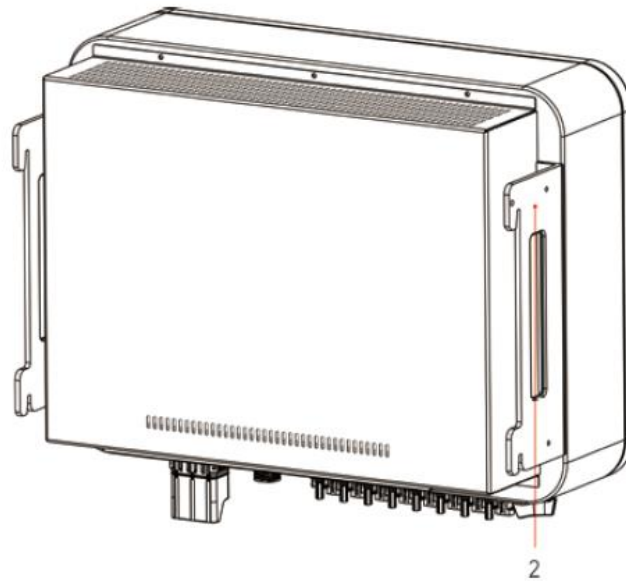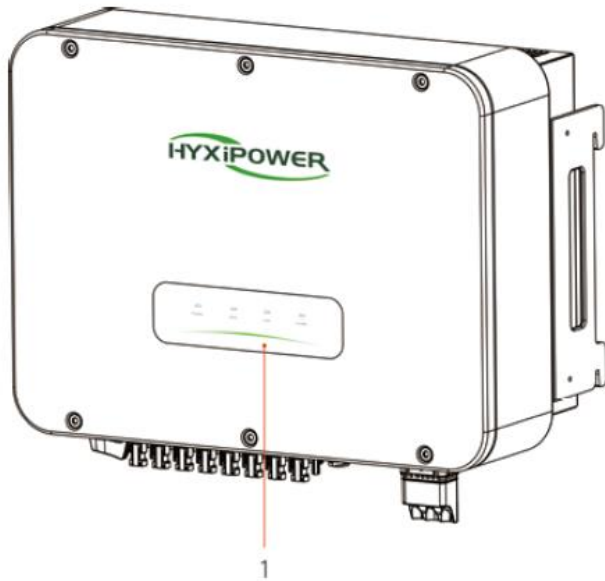

No.	Name	Description
1	LED Panel	Displays the current operating status of the inverter
2	Mounting ear bracket	Secure the top of the inverter
3	DC switch locking hole	Reserved DC lock hole
4	DC Switch	Photovoltaic panel DC power input switch
5	Breather valve	Ventilation

No.	Name	Description
6	DC input port	DC input port from the photovoltaic panel to the inverter
7	Cooling fan	Equipment cooling
8	Communication Interface(COM.2)	Communication port between the inverter and the smart meter
9	DCS Interface(COM.1)	DCS connection port
10	AC output interface	Inverter AC wiring port

Program Overview-DCS Introduction



RESET button:

1. Press 2 times to restart
2. Press 3 times to enable local configuration (AP mode);
3. Press 4 times to restore factory settings
(Within 1 second between pressing)

Indicator	Status	Description
Power	On	Power ON
	OFF	Power OFF
NET.	Solid Green	Connected to server
	Flashing	Connecting to server
	OFF	Disconnected from server
COM.	Solid Green	Normal communication with inverter
	Flashing	Communicating with inverter
	OFF	Communication with inverter failed

Program Overview-Meter Introduction



The DTSU666 three-phase energy meter

The DTSU666 three-phase energy meter is an advanced device integrating high-precision metering, remote communication, and intelligent management. Equipped with a high-performance metering chip, this meter ensures accurate power measurement and supports real-time energy monitoring, enabling users to track electricity consumption effectively. Additionally, the DTSU666 features an RS485 communication interface and wireless modules, facilitating remote data exchange and centralized monitoring, thereby significantly enhancing operational efficiency.



Current Transformer

The CT (Current Transformer), as a critical component of the DTSU666 energy meter, employs a non-contact measurement method, enhancing safety and reliability. It enables accurate high-current measurement and adapts to varying current and voltage levels, significantly expanding the meter's application scope.

CONTENTS

01 Program Overview

02 Installation Preparation

03 Device Installation

04 App Configuration

Installation Preparation-Materials and Tools Preparation



Conduct a site survey and make plans in advance before installation







1. Plan the equipment placement in advance: Determine the mounting position for the inverter.
2. Understand the PV connection status on-site: Check whether photovoltaic (PV) panels are present and whether their current and voltage meet the inverter's specifications. If they exceed the specifications, inform the customer in advance to reduce the number of PV panels to avoid equipment damage.
3. Check the location of the inverter and the main circuit breaker where power enters the house.
4. According to the pre-installation assessment of the site environment, measure the required length of each cable and purchase the necessary cables in advance for installation, as shown in the table on the right.

Important! ! The following cable products are not provided and need to be purchased separately.

No.	Name	Description	Specification
1	PV Cable	Cables used from the photovoltaic panels to the inverter should be multi-core photovoltaic cables with a maximum voltage tolerance of 1100V.	conductor cross-sectional area: 4~6mm ² outer diameter of the cable: 5.5~9mm
2	AC output cable	Used for AC-side wiring of the inverter, outdoor copper-core cable / aluminum-core cable	conductor cross-sectional area: 16-35mm ² copper-core cable /35~50mm ² aluminum-core cable outer diameter of the cable: 20-30mm
3	Ground wire	For equipment grounding use	conductor cross-sectional area≥ 16mm ²

Installation Preparation-Materials and Tools Preparation

Existing equipment list

No.	Name	Figure	Description
1	Three Phase String Inverter		Includes one inverter main unit and related accessories.
2	DCS		After registering the device to the cloud server, it can be centrally managed through the cloud platform.
3	The DTSU666 energy meter		Measurement of circuit voltage, current, power, etc.
4	Current Transformer		To acquire grid-side AC current for precise inverter power output regulation and anti-islanding protection. Note: The directional arrow must be oriented toward the grid during installation.
5	Ethernet Cable		The device includes a 2-meter CAT5e Ethernet cable as standard. Extended cable lengths must be procured separately if required.
6	Wall-mounted Bracket		Wall-mounted inverter support (mounting bracket included in product packaging)

Installation Preparation–Tool Installation

Installation Tool



Electric Drill




Heat Gun



Hex Key



Wire Stripper

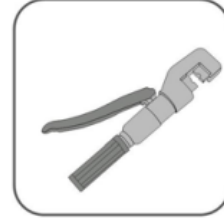

Hydraulic Pliers



Crimping Tool



Screwdriver



Marker Pen



Utility Knife



Multimeter




Tape Measure



Hammer

Protect Tool

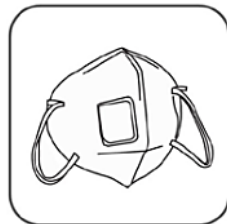

Protective Mask



Safety Glasses



Insulated Safety Shoes



Insulating Gloves

CONTENTS

01 Program Overview

02 Installation Preparation

03 Device Installation

04 App Configuration

Device Installation- Product Unboxing Inspection



Inverter Unboxing Inspection:


- Check whether the device hardware and ports are intact.
- Check whether the device accessories are intact.

No.	Name
1	Inverter
2	Mounting Bracket
3	Signal Connector
4	AC Connector
5	Hexagon Wrench
6	DC Connector
7	Screws

1



2

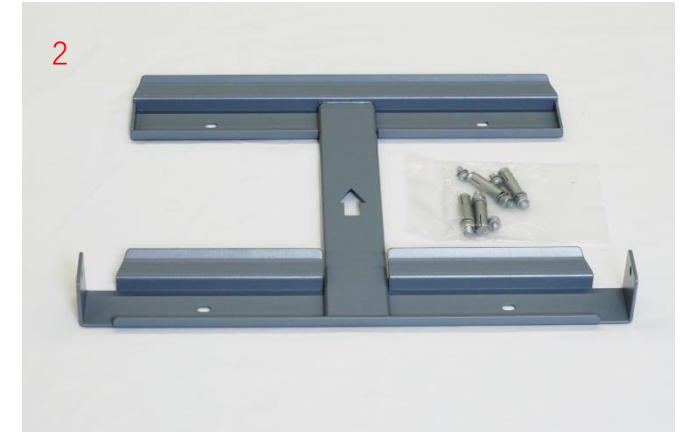

3

4



5



Device Installation–Environment Requirements





1. Suitable for both **indoor and outdoor** installation.
2. -30°C to +60°C, 0~100% relative humidity (RH).
3. **Select a shaded location** to avoid direct sunlight and protect against rain/snow.
4. **Ensure proper ventilation for heat dissipation.**
5. The mounting structure must support at least **4 times** the inverter's weight.,
6. Mount vertically or tilted backward $\leq 15^\circ$ to optimize thermal performance.
7. Do NOT install forward-facing, backward-facing, upside-down, horizontally, or sideways.
8. For multi-unit installations, maintain $\geq 300\text{mm}$ clearance between inverters.

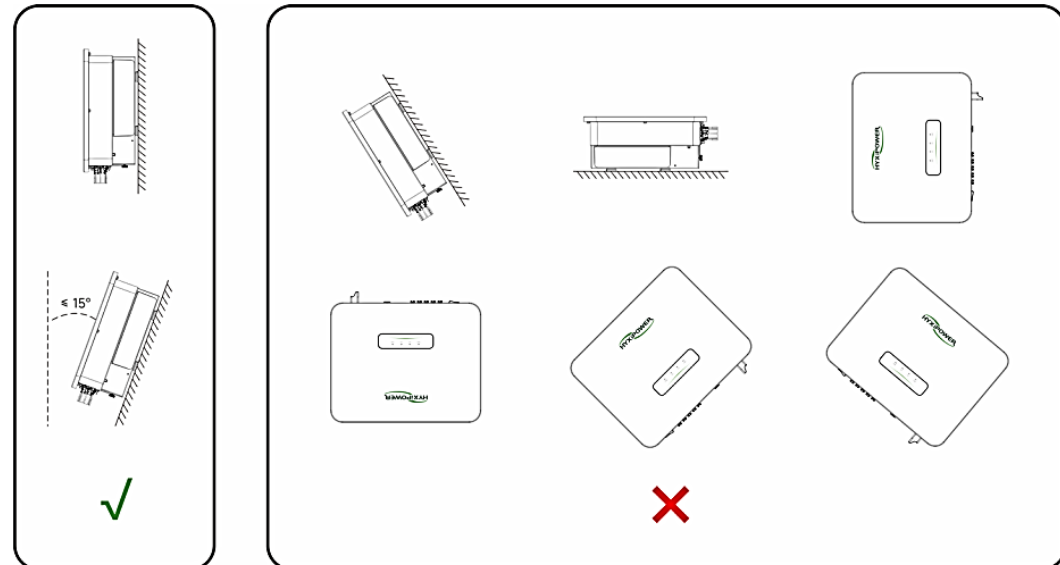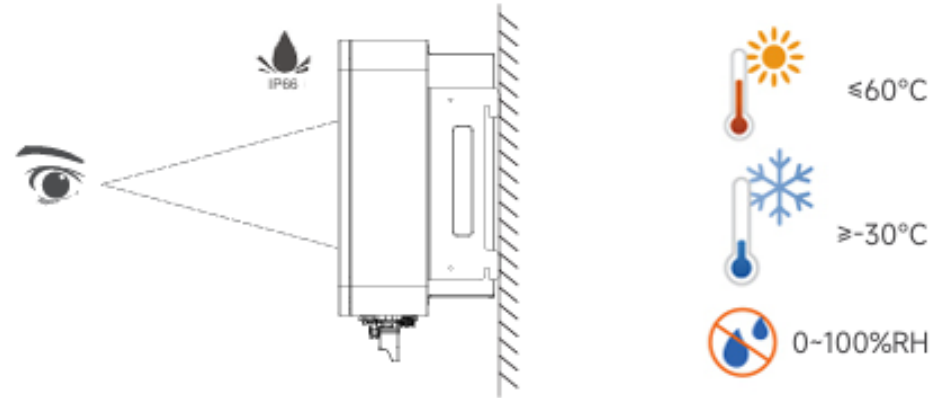

Device Installation-Inverter Installation

The mounting bracket and inverter can be securely installed in the following ways:

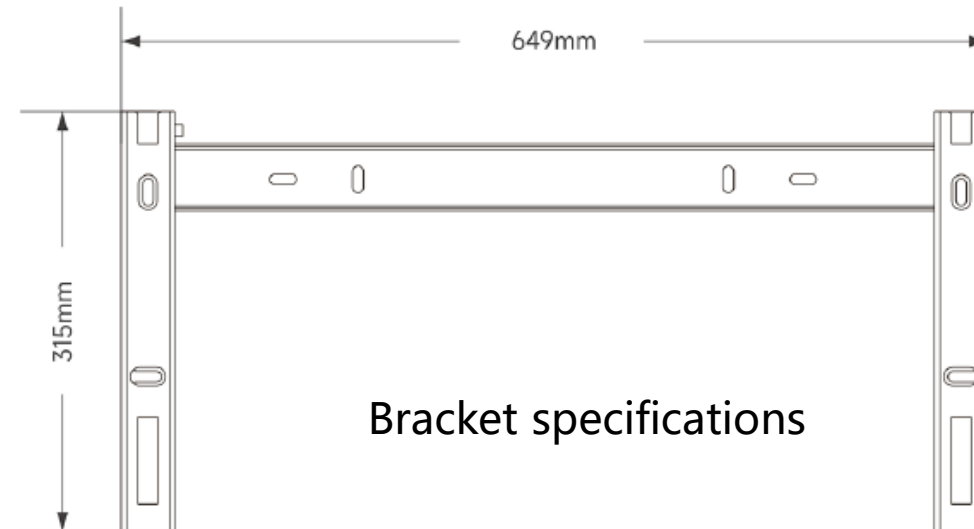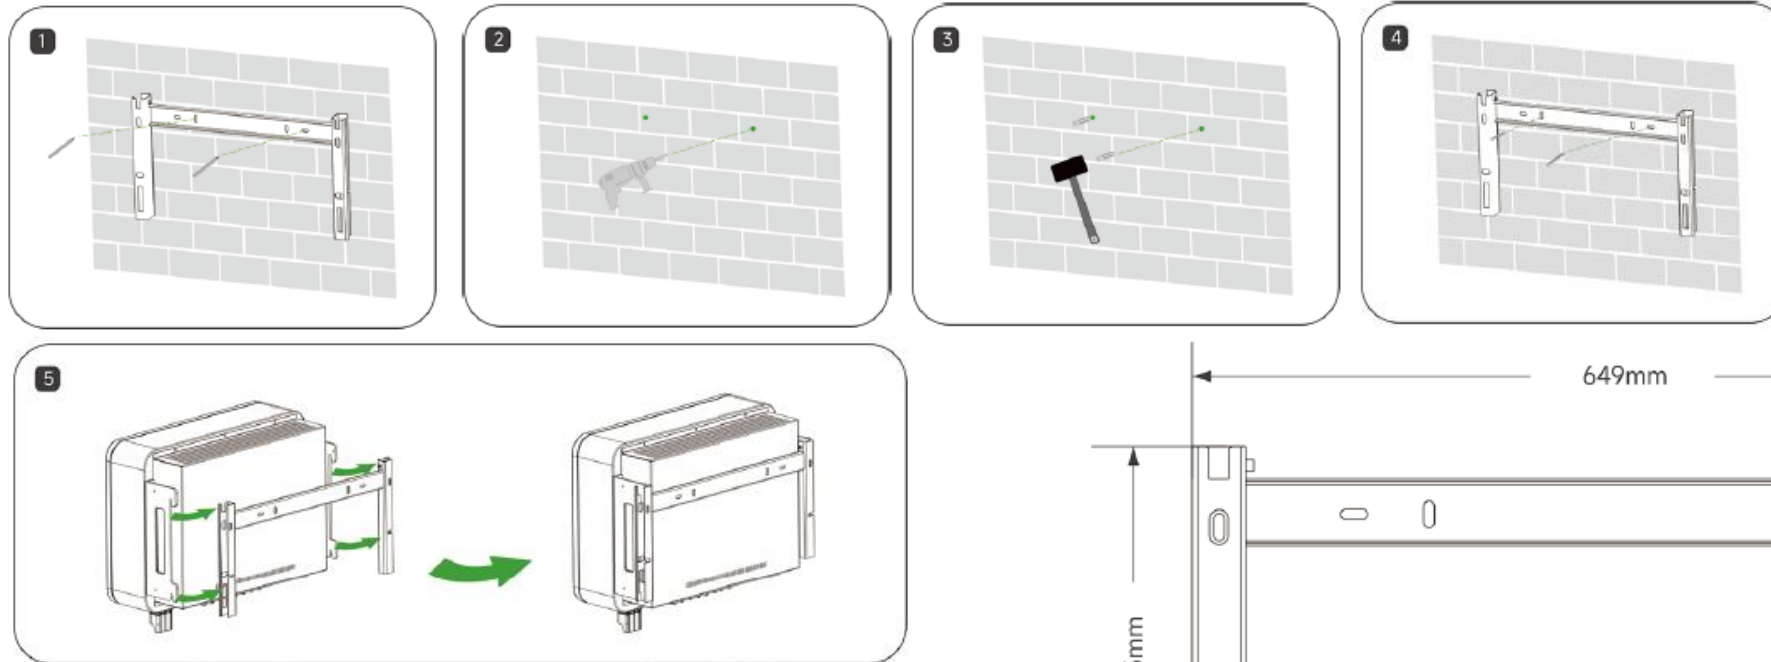


Bracket specifications

Device Installation-Inverter Installation








When installing multiple inverters, a distance of at least 300mm should be maintained between two inverters.

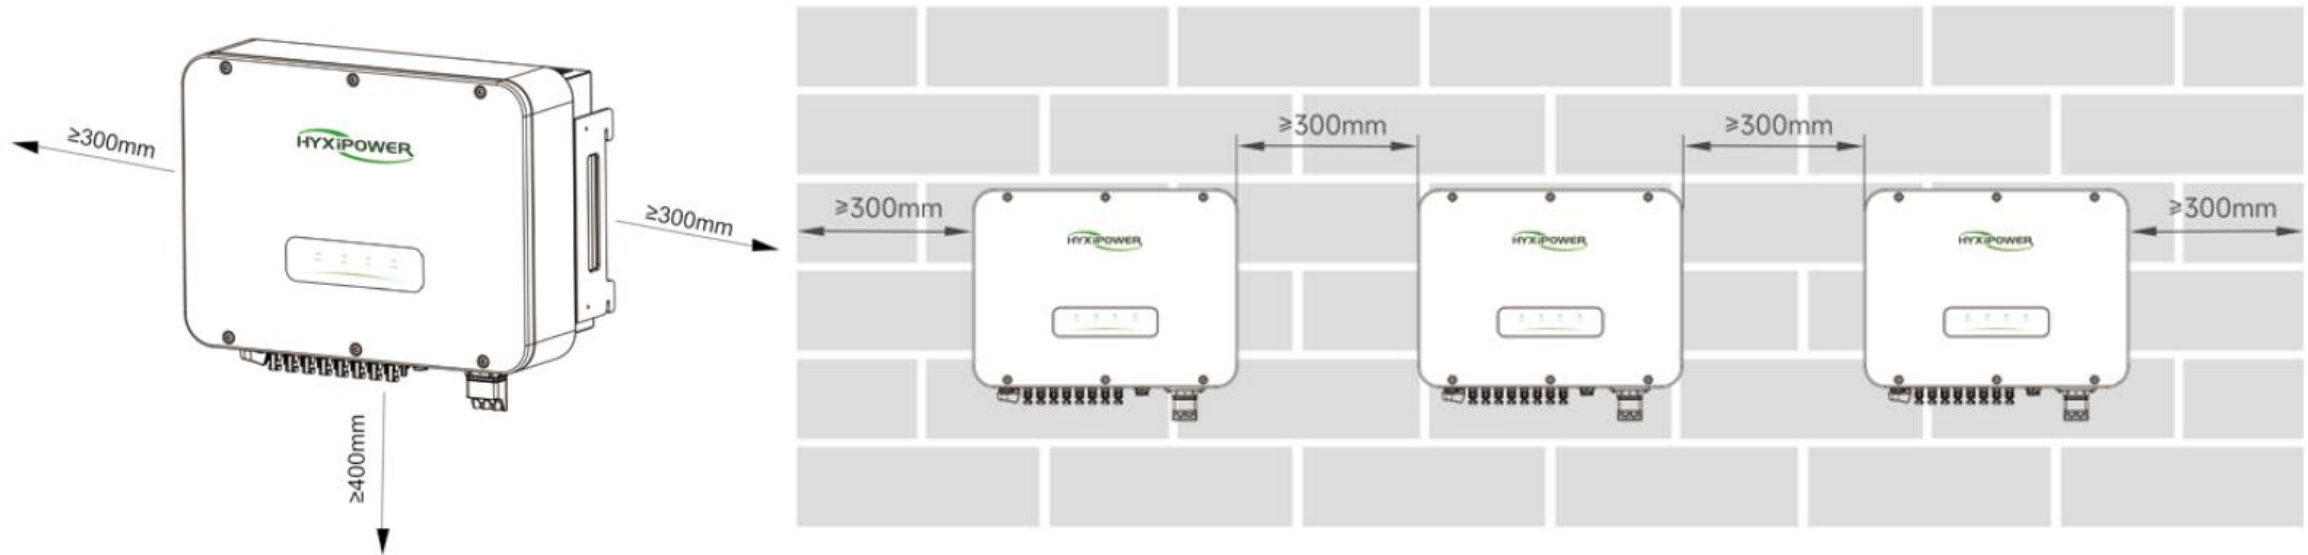

Note: Before installing the equipment, please ensure that the photovoltaic panels are installed and the cables have been properly laid.

Device Installation-Inverter grounding installation

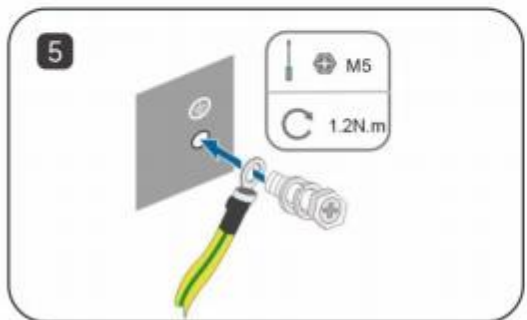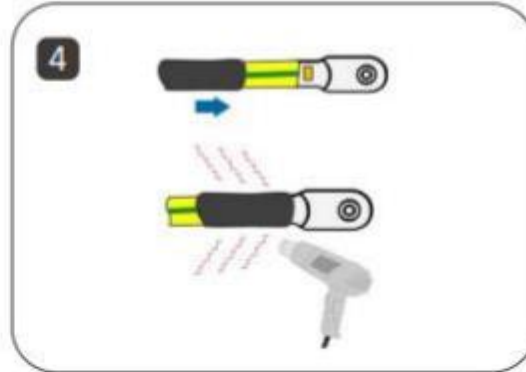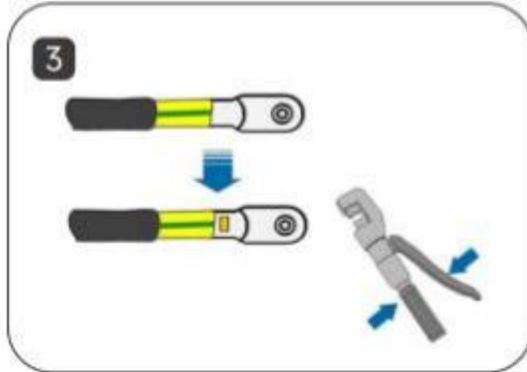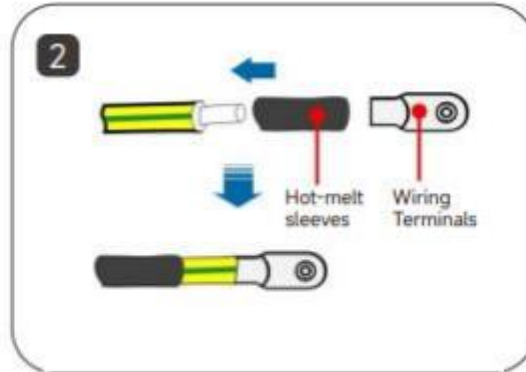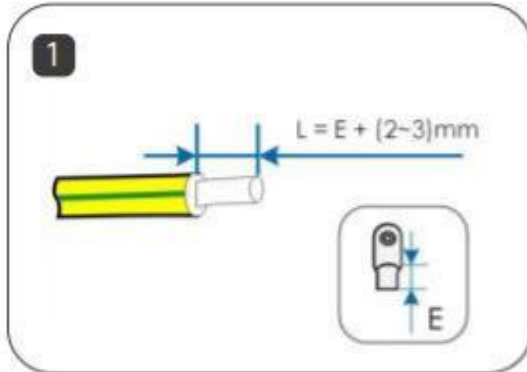

Step 1 : Strip off a certain length of insulation

$L = E + (2-3)mm$.


Step 2 : Pass the cable through the hot melt sleeve and insert it into the terminal block.

Step 3 : Use crimping pliers to tightly connect the terminal blocks and cables .

Step 4 : Adjust the hot melt sleeve to cover the end of the terminal block and the power cord, and use a hot air gun to blow the hot melt sleeve to cover the end of the power cord and terminal block.

Step 5 : Use a screwdriver to fix the ground wire to the inverter ground position.

Device Installation-PV-side connection

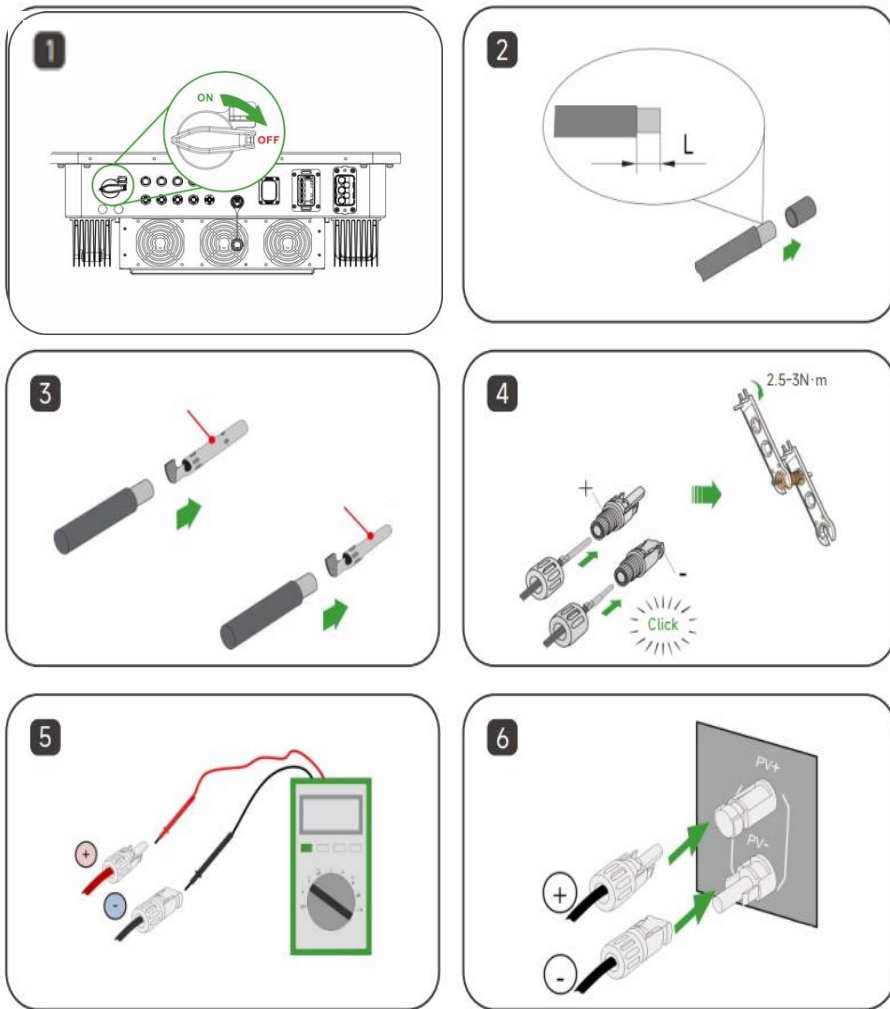

Step 1: Keep the switch on the inverter turned off.

Step 2: Strip all DC cables insulation by approximately 7 mm.


Step 3: Use crimping pliers to bundle the cold-pressed terminals to the cables. **Note that the positive and negative terminals are different** and need to be distinguished.

Step 4: Insert the cable through the cable sealing sleeve, insert it into the insulating sleeve and fasten it, and pull the cable gently to make sure it is tightly connected. Use 2.5 ~ 3N-m force to tighten the sealing sleeve and insulation sleeve.

Step 5: Use a multimeter to check whether the polarity of the photovoltaic string connecting cable is correct.

Step 6: Connect the PV connector to the corresponding terminal on the inverter until you hear a "click" sound.

Device Installation-AC-side connection

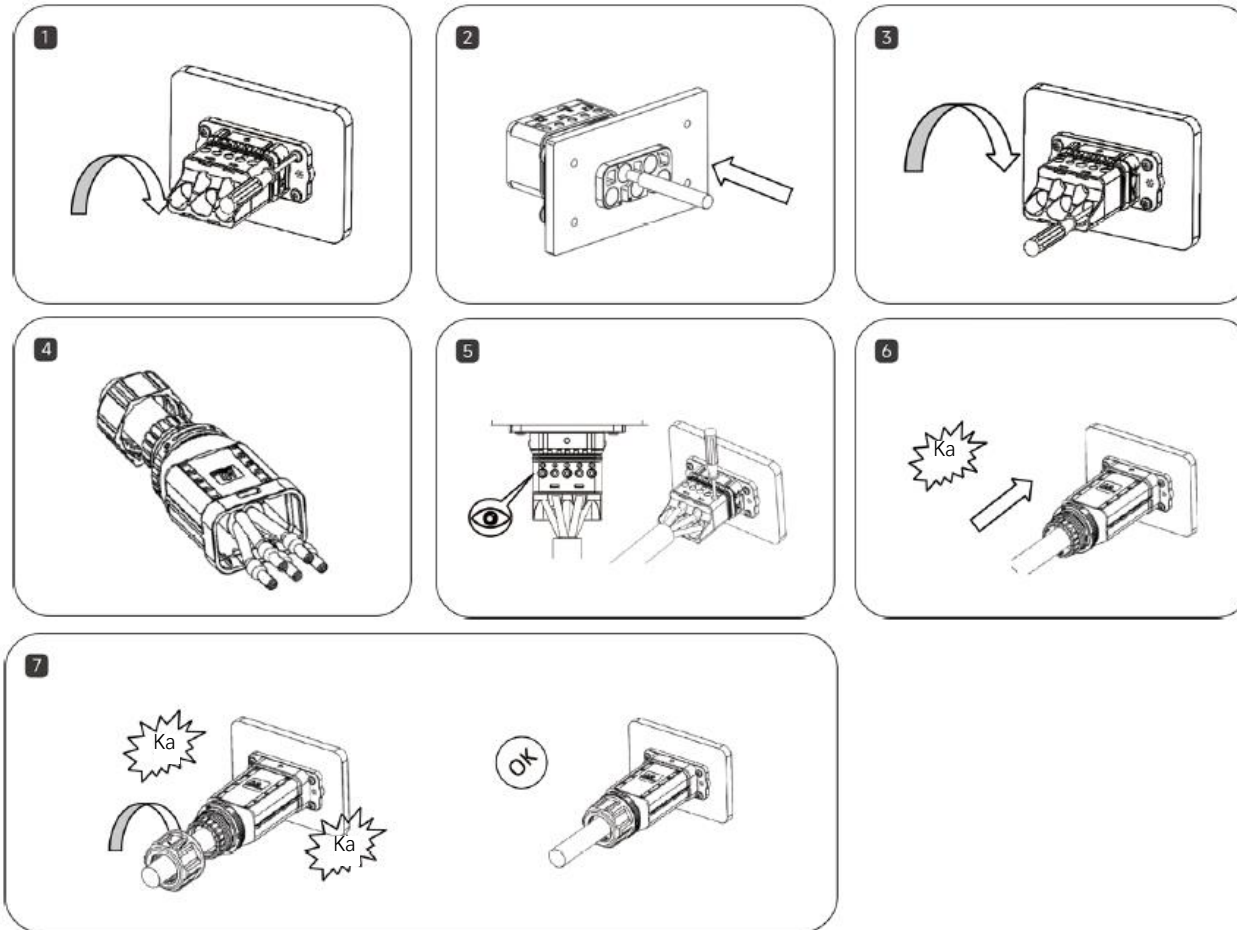

Step 1: Use a T20 internal Torx screwdriver to tighten the locking plate screw with a torque of 1.2 ± 0.1 N·m.

Step 2: Insert the stripped wires into the corresponding wiring holes according to the wiring sequence.

Step 3: Use a T8 internal Torx screwdriver to crimp the wires, with a torque of 1.2 ± 0.1 N·m.


Step 4: Pass the stripped wires through the locking nut in sequence; for the main body (flexible wires), crimp insulated terminals.

Step 5: Insert the cables into the rubber core according to the wiring sequence, check through the inspection hole to ensure the cables are in place, then tighten the crimping screw with a torque of 4 ± 0.1 N·m.

Step 6: Insert the main body into the rubber core and listen for a “click” sound.

Step 7: Use an open-end wrench to tighten the nut with a torque of 10.0 ± 0.1 N·m; the installation is complete after hearing “click, click” sounds.

Device Installation- Meter Connection

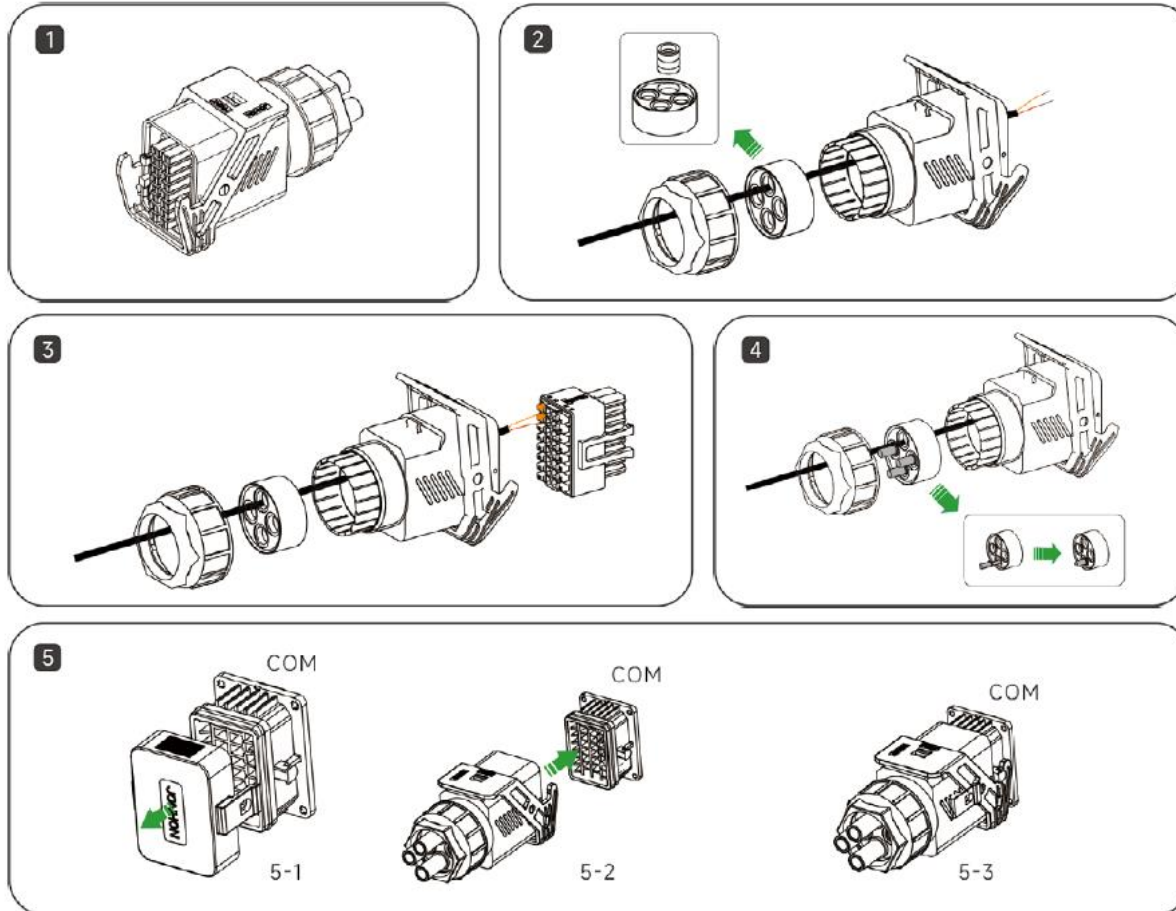

Step 1: Pull the crimping assembly out of the communication terminal.

Step 2: Insert the meter's RS485 2-pin wire into the communication terminal as shown, then strip the wires.

Step 3: Crimp the stripped RS485 2-pin wires onto the crimping component (press the yellow button). Refer to Device Installation Step 9 for details.

Step 4: Insert the waterproof rubber plug into any unused ports.

Step 5: Remove the inverter's COM port cover, insert the communication terminal, and secure the latch.


Step 6: Connect the meter in parallel to the grid (refer to Device Installation Step 10).

Step 7: Install the three current transformers (CTs) by clamping their magnetic cores around each phase line (L1/L2/L3) between the circuit breaker and the grid. Ensure the arrow markings point toward the grid side (see diagram below).

Caution:

Only the meter models

specified by HYXiPower shall be used.

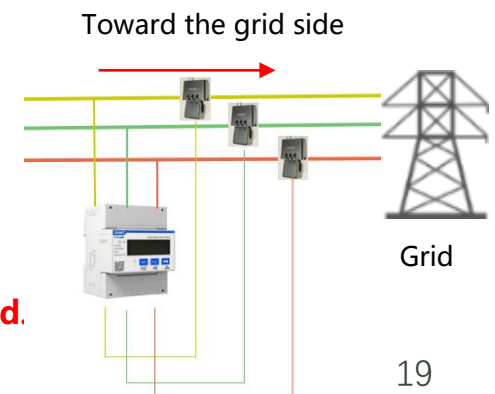

Device Installation- Meter Connection



COM Communication Port
(Close-up View)

Note:

Pin 2 on the COM port connector corresponds to RS485 Communication A on the meter, and Pin 4 corresponds to RS485 Communication B. (It is recommended to use twisted-pair cable for connection.)

Device Installation- Meter Connection




U : Line Wire R
V : Line Wire S
W: Line Wire T
N : Neutral Wire

**Wiring Diagram
(Top Side of
Electricity Meter)**

Wiring Diagram (Top Side of Electricity Meter):

- Connect the three-phase live wires and neutral wire between the grid and the inverter as shown in the diagram. The phase sequence of the upper terminals L1, L2, L3 must correspond one-to-one with the lower CT terminals IA (13,14), IB (16,17), IC (19,21). Ensure all CT arrows point toward the grid side.

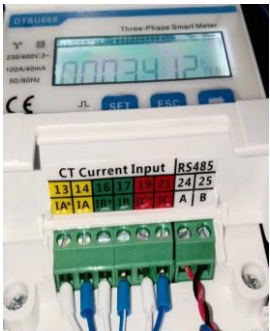

**Wiring Diagram
(Bottom Side of
Electricity Meter)**

Wiring Diagram (Bottom Side of Electricity Meter):

- For the current transformer (CT) communication wires connected to the three-phase live lines: **the white wire corresponds to I*, and the blue wire corresponds to I.**
- The inverter communicates with the meter via **PIN 2 (A) and PIN 4 (B)** of the COM port.

Device Installation- DCS Connection


1、DCS Installation(4G Version)

Step1: Remove the DCS protective cover and insert the SIM card.

Step2: Install the DCS waterproof cover

Step3: Remove the waterproof cover from the inverter communication interface.

Step4: Insert the DCS into the corresponding communication terminal at the bottom of the inverter and tighten it to ensure a secure connection.

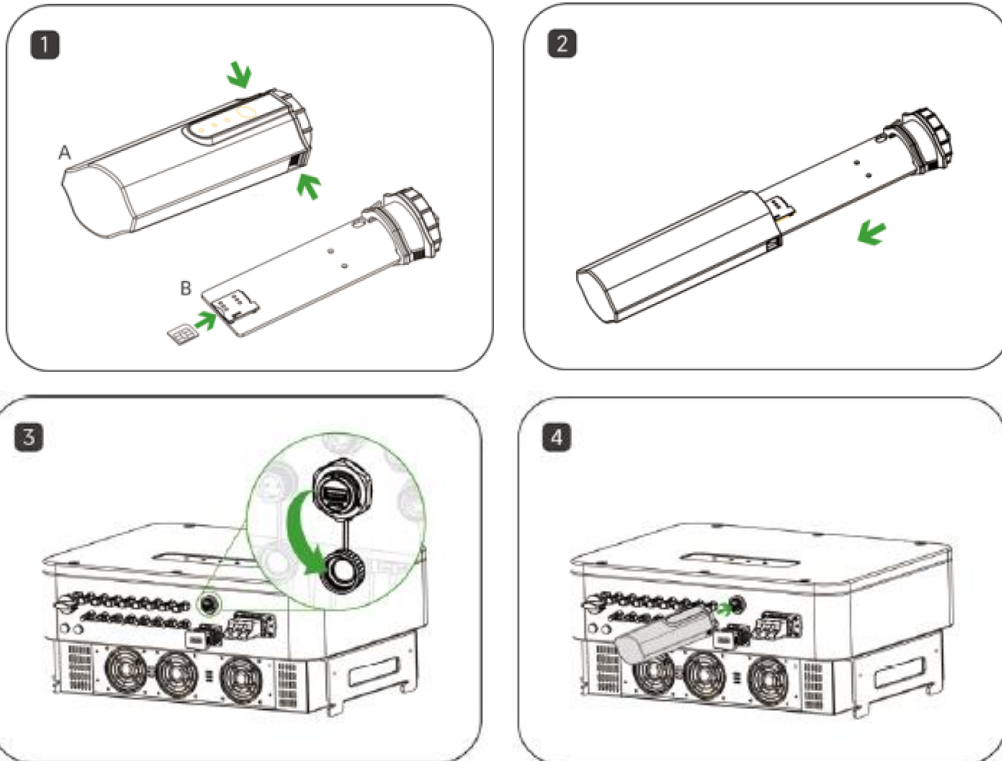


2、DCS Installation (The WiFi version does not require SIM card installation or removal.)

Step1: Remove the waterproof cover from the inverter's communication interface.

Step2: Insert the DCS into the corresponding communication terminal at the bottom of the inverter, tighten it, and ensure it is securely connected.

Note: For the WiFi version, if the on-site signal is weak (below -60 dBm), it is recommended to add a WiFi repeater to enhance the network signal. Otherwise, there is a risk that device data may fail to upload to the platform.

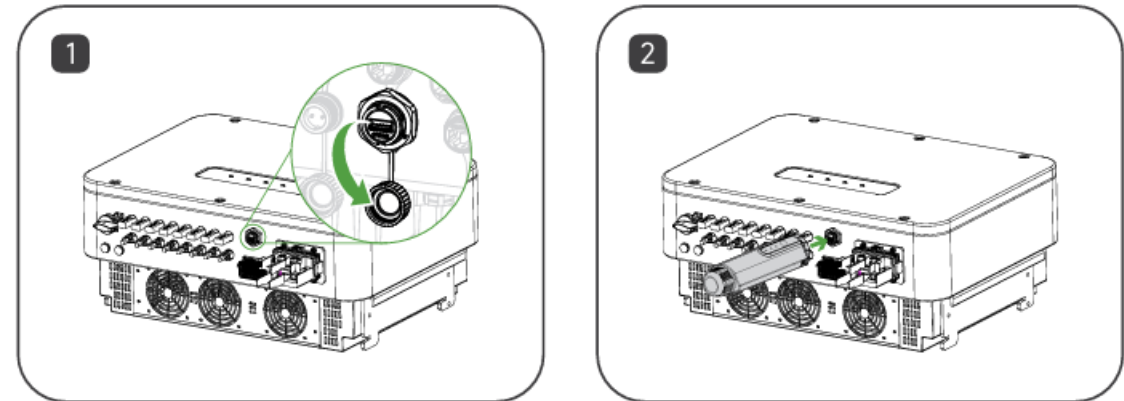

Device Installation- Inverter System Startup

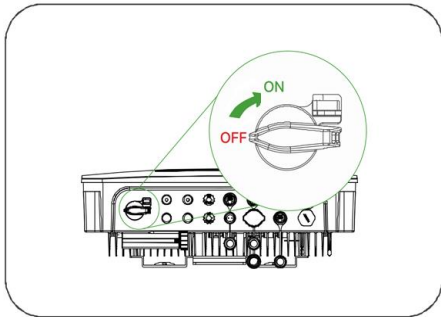


Figure1

Step 1: Open the circuit breaker on the AC side.

Step 2: Open the circuit breaker on the photovoltaic side.

Step 3: Turn on the DC switch on the inverter.

Step 4: Confirm the indicator light status of the inverter. The indicator light status in Figure 2 is normal.

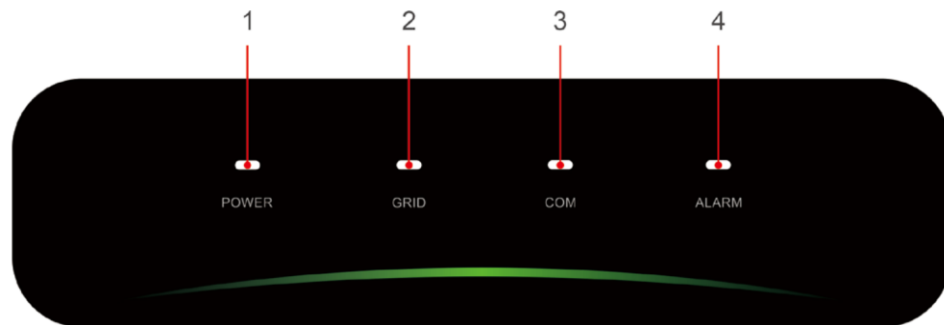


Figure2

No.	Indicator	Status	Description
1	POWER	ON	Inverter Powered ON
		OFF	Inverter Powered OFF
2	GRID	ON	Grid Normal
		Blink 1	Grid Abnormal
		Blink 2	Grid Disconnected
3	COM.	ON	COM. Normal
		Blink 1	Meter COM. Fault
		Blink 2	COM. Fault With BMS
		OFF	Fault Both Meter&BMS
		OFF	Normal
4	ALARM	OFF	Normal
		Blink 1	Inverter Internal Alarm
		Blink 2	Other Alarms

CONTENTS

01 Program Overview

02 Installation Preparation

03 Device Installation

04 App Configuration




- 1、Download HYXipowerAPP
- 2、Register the account of the person in charge of the organization



Register the DCS communication stick to the cloud server through local debugging.

All Hyxipower equipment is managed using the cloud platform. After the equipment is registered to the cloud server, it can be managed uniformly through the cloud platform.

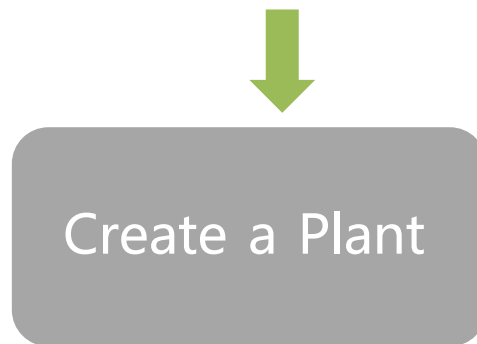

Create a power station for users

You can manage the equipment through the power station and check the equipment status, system power generation and usage, etc.

APP Configuration-Registration



The entire process requires 2 email accounts: Organization and Owner.

Step 2: Download the APP and **register**

Method 1

Search "Hyxipower" in the Application Store

- APP store (IOS)
- Google play

Method 2

Scan the QR code download the APP



Language

HYXiPOWER

hyxipower01@bccto.cc

Password

Forgot Password? **Register Now**

☒ I agree to the Terms of Use and I have read the Privacy Policy

Login

Device Installation Demo Site



Select Role

Please select the relevant server for your area

Select Your Server **European Server**

If Your Role Is An Installer Or A Distributor, Please Register For The Following Role.

Register as Organization
Installer or Distributor

Register as Owner
Plant Owner

If You Have Only Installed A Balcony Photovoltaic System, Please Register The Following Roles.

Registered Balcony System Homeowner
Balcony System Owner

Step 3 : According to the country or region, select **server**, select **organization** , fill in the relevant information and **register**.

Register as Organization

Note: If your organization or company has registered for an organization account in this system, you do not need to register again. Please contact your administrator to add you to the member list

Organization/Company Name **Please Enter**

Registration Method
Please Enter @hotmail.com **Send**

Complete Info
Password **Please Enter**
Confirm Password **Please Enter**

Register

☒ I agree to the Terms of Use and I have read the Privacy Policy

APP Configuration-Near-end Commissioning



Registration

1. Download HYXipower APP .
2. Register the account of the person in charge of the organization.



Near-end
Commissioning

Register the DCS communication stick to the cloud server through local debugging.
All Hyxipower equipment is managed using the cloud platform. After the equipment is registered to the cloud server, it can be managed uniformly through the cloud platform.



Create a Plant



Create a power station for users
You can manage the equipment through the Plant and check the equipment status, system power generation and usage, etc.

APP Configuration-Near-end Commissioning



Step1:Click **Device Installation** in **Service** interface.

Then scan the QR code of the Data Communication Stick. If failed ,click the Manually Connect.

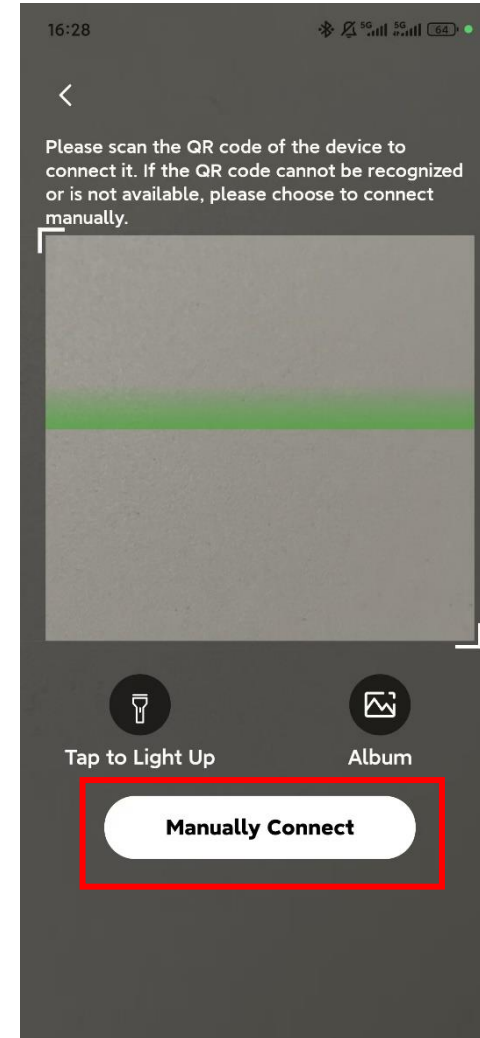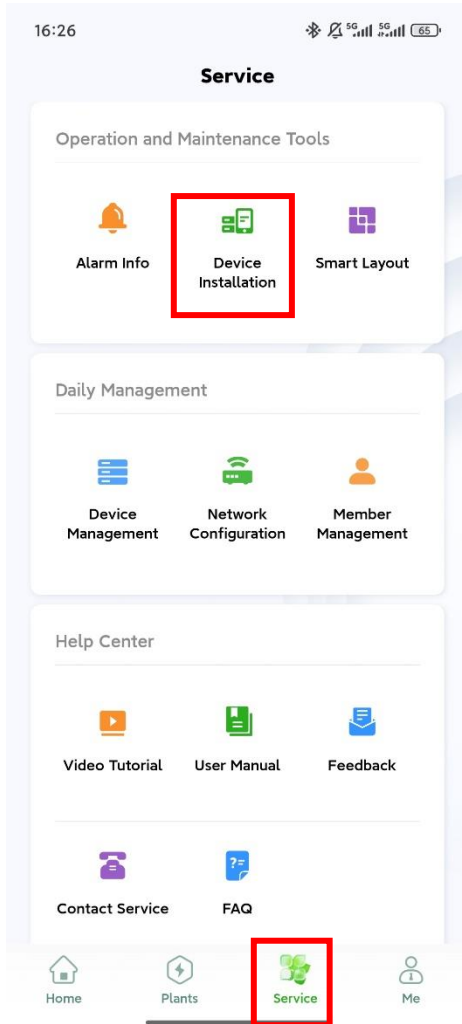


APP Configuration-Near-end Commissioning




Step2: Device login, initial password: hyxi0607. Log in and change the password, then save it.

If you forgot the password, quickly press the RESET button on the DCS four times to restore factory settings

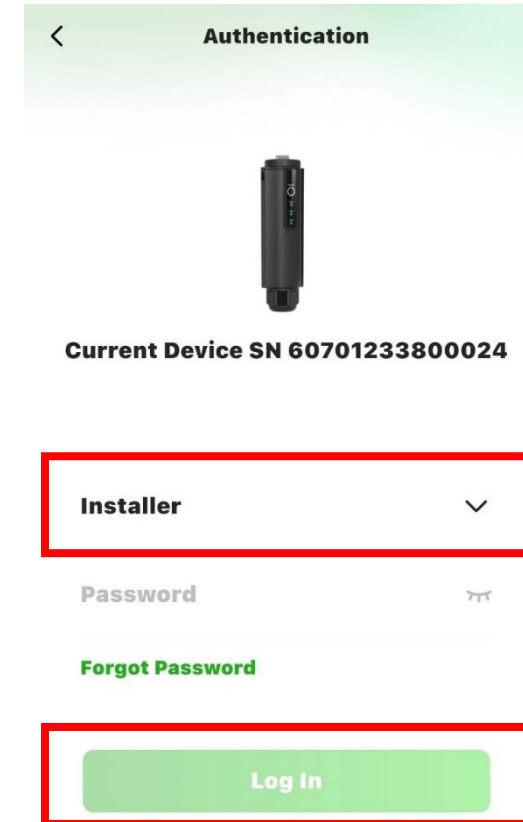A screenshot of the 'Authentication' screen in the APP. The screen has a light green header with a back arrow and the title 'Authentication'. Below the header is a dark grey image of a device. Underneath the image, the text 'Current Device SN 60701233800024' is displayed. The main content area contains a dropdown menu with 'Installer' selected, a 'Password' input field with a toggle icon, a 'Forgot Password' link in green, and a green 'Log In' button. Red rectangular boxes highlight the 'Installer' dropdown and the 'Log In' button.

< Authentication



Current Device SN 60701233800024

Installer ▼

Password 🔍

[Forgot Password](#)

Log In



APP Configuration-Near-end Commissioning



Step3: Quick Settings

① **Device Management**: The DCS automatically reads the inverter's **SN and model number**.

Meter settings: 1. Grid type—**Three-phase**; 2. Configure meter—default address 1, install on **grid side**.

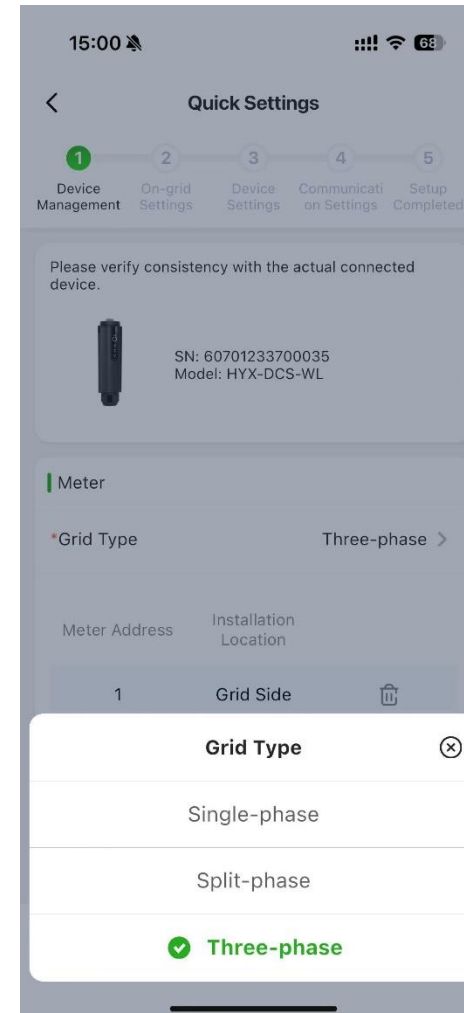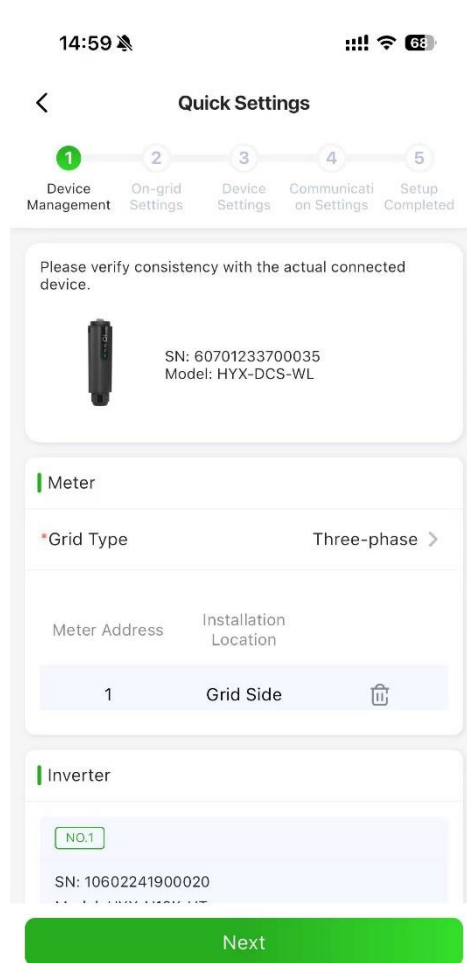

APP Configuration-Near-end Commissioning



Step4: ② **On-grid Settings:** Select the corresponding country's grid-code, then click Next.



Step 5: ③ **Device Settings** - Set feed-in power limit (enable and set to 0 to stop feeding grid).







APP Configuration-Near-end Commissioning



Step6: ④ Communication Settings: Wi-Fi Mode: Enter **Wi-Fi name and password**.

Wired Mode: Ensure automatic IP acquisition is enabled.

4G Mode: The APN, username and password will be recognized automatically, and proceed to next step after setup.

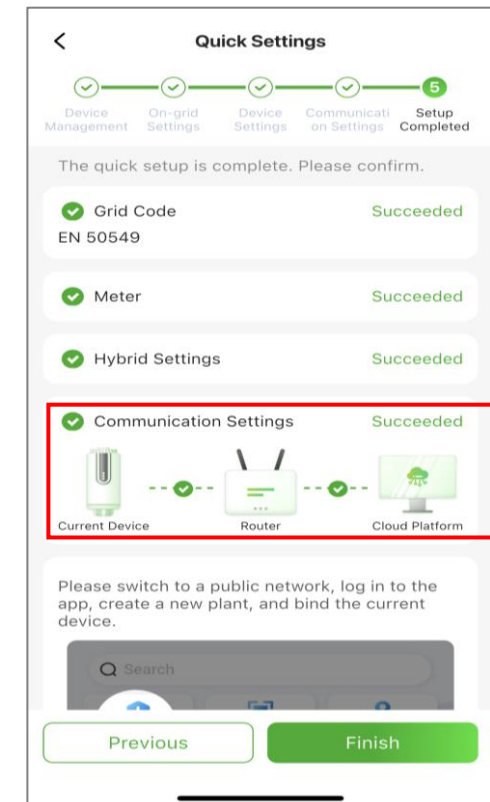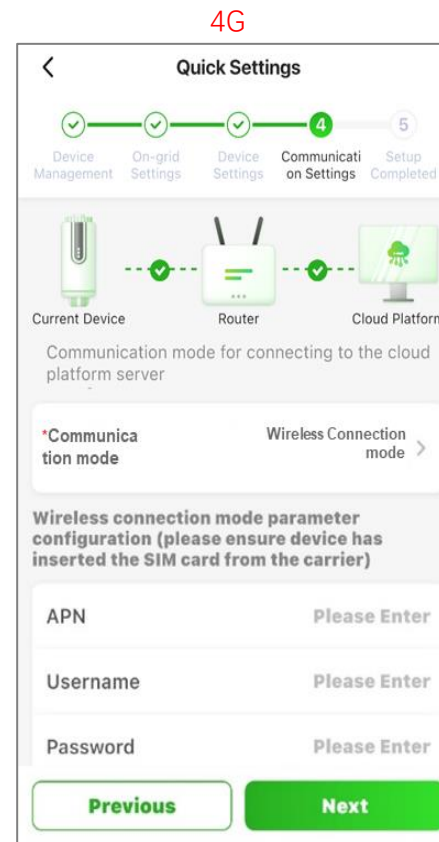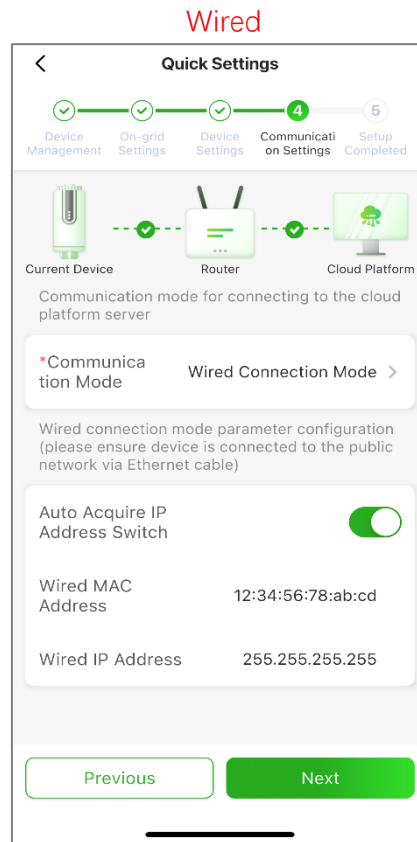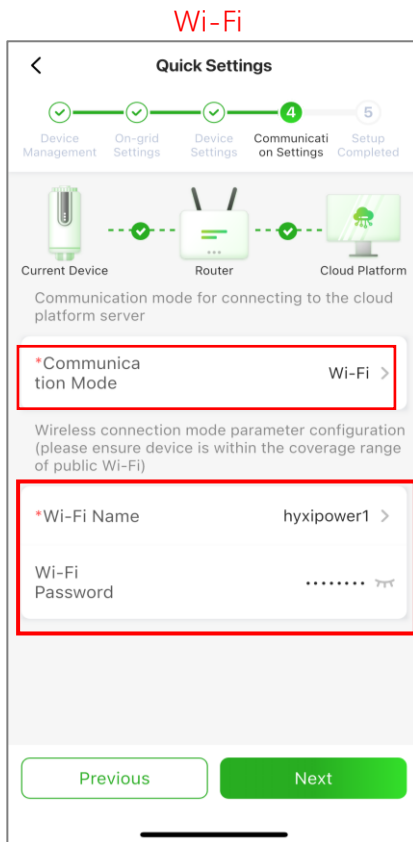

- Completion sign: Green checkmarks show between Device - Router - Cloud platform
DCS shows three steady LED lights

APP Configuration-Create a Plant



Registration

1. Download HYXipower APP .
2. Register the account of the person in charge of the organization.



Near-end
Commissioning

Register the DCS communication stick to the cloud server through local debugging.

All Hyxipower equipment is managed using the cloud platform. After the equipment is registered to the cloud server, it can be managed uniformly through the cloud platform.



Create a Plant


Create a power station for users

You can manage the equipment through the Plant and check the equipment status, system power generation and usage, etc.


APP Configuration-Create a Plant




Step 1: Disconnect the phone from the DCS' s WiFi. Make sure your phone has Internet access

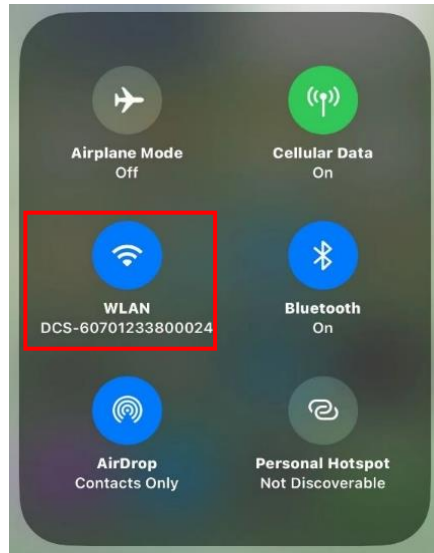

Step 2: Log in to the organization account, click "Add Plant"

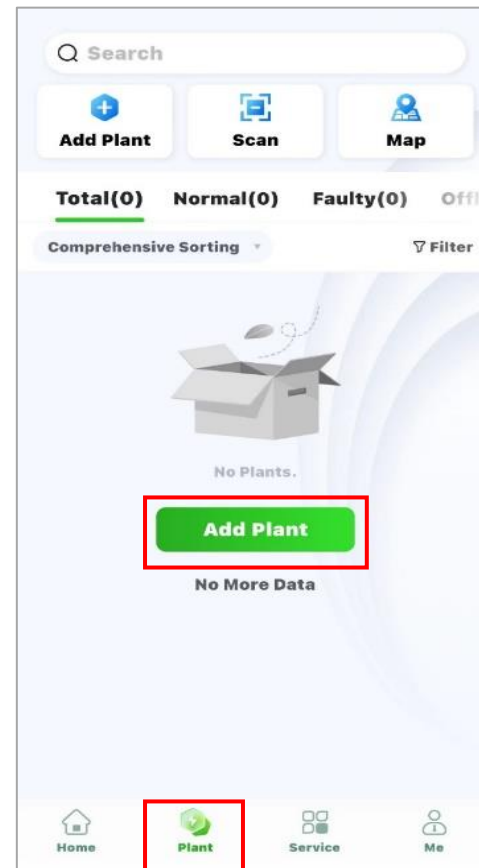


Step 3: Scan the QR code of the DCS or add it through Recently Debugged Device

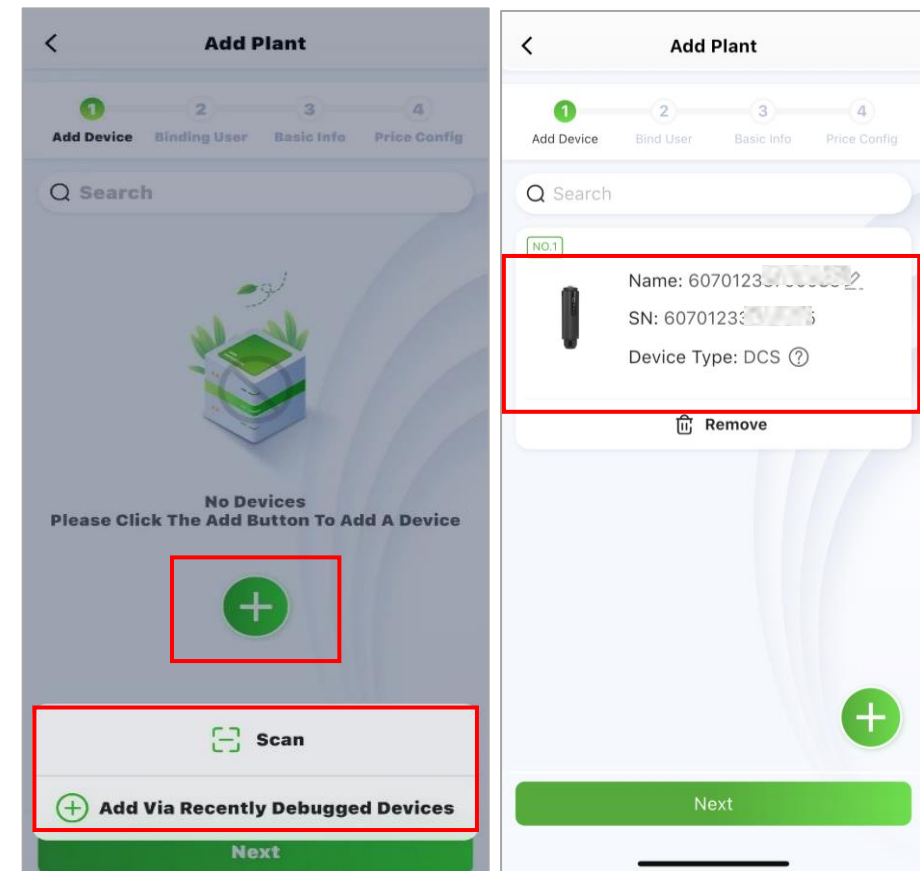

APP Configuration-Create a Plant





Step 4: Add owner - manually add or scan the owner's QR code to bind. Manually add - enter the email address or mobile phone number of the Plant owner. If the owner is not registered, click to help him register and bind. The system will generate a random password and send a text message or email to the registered account

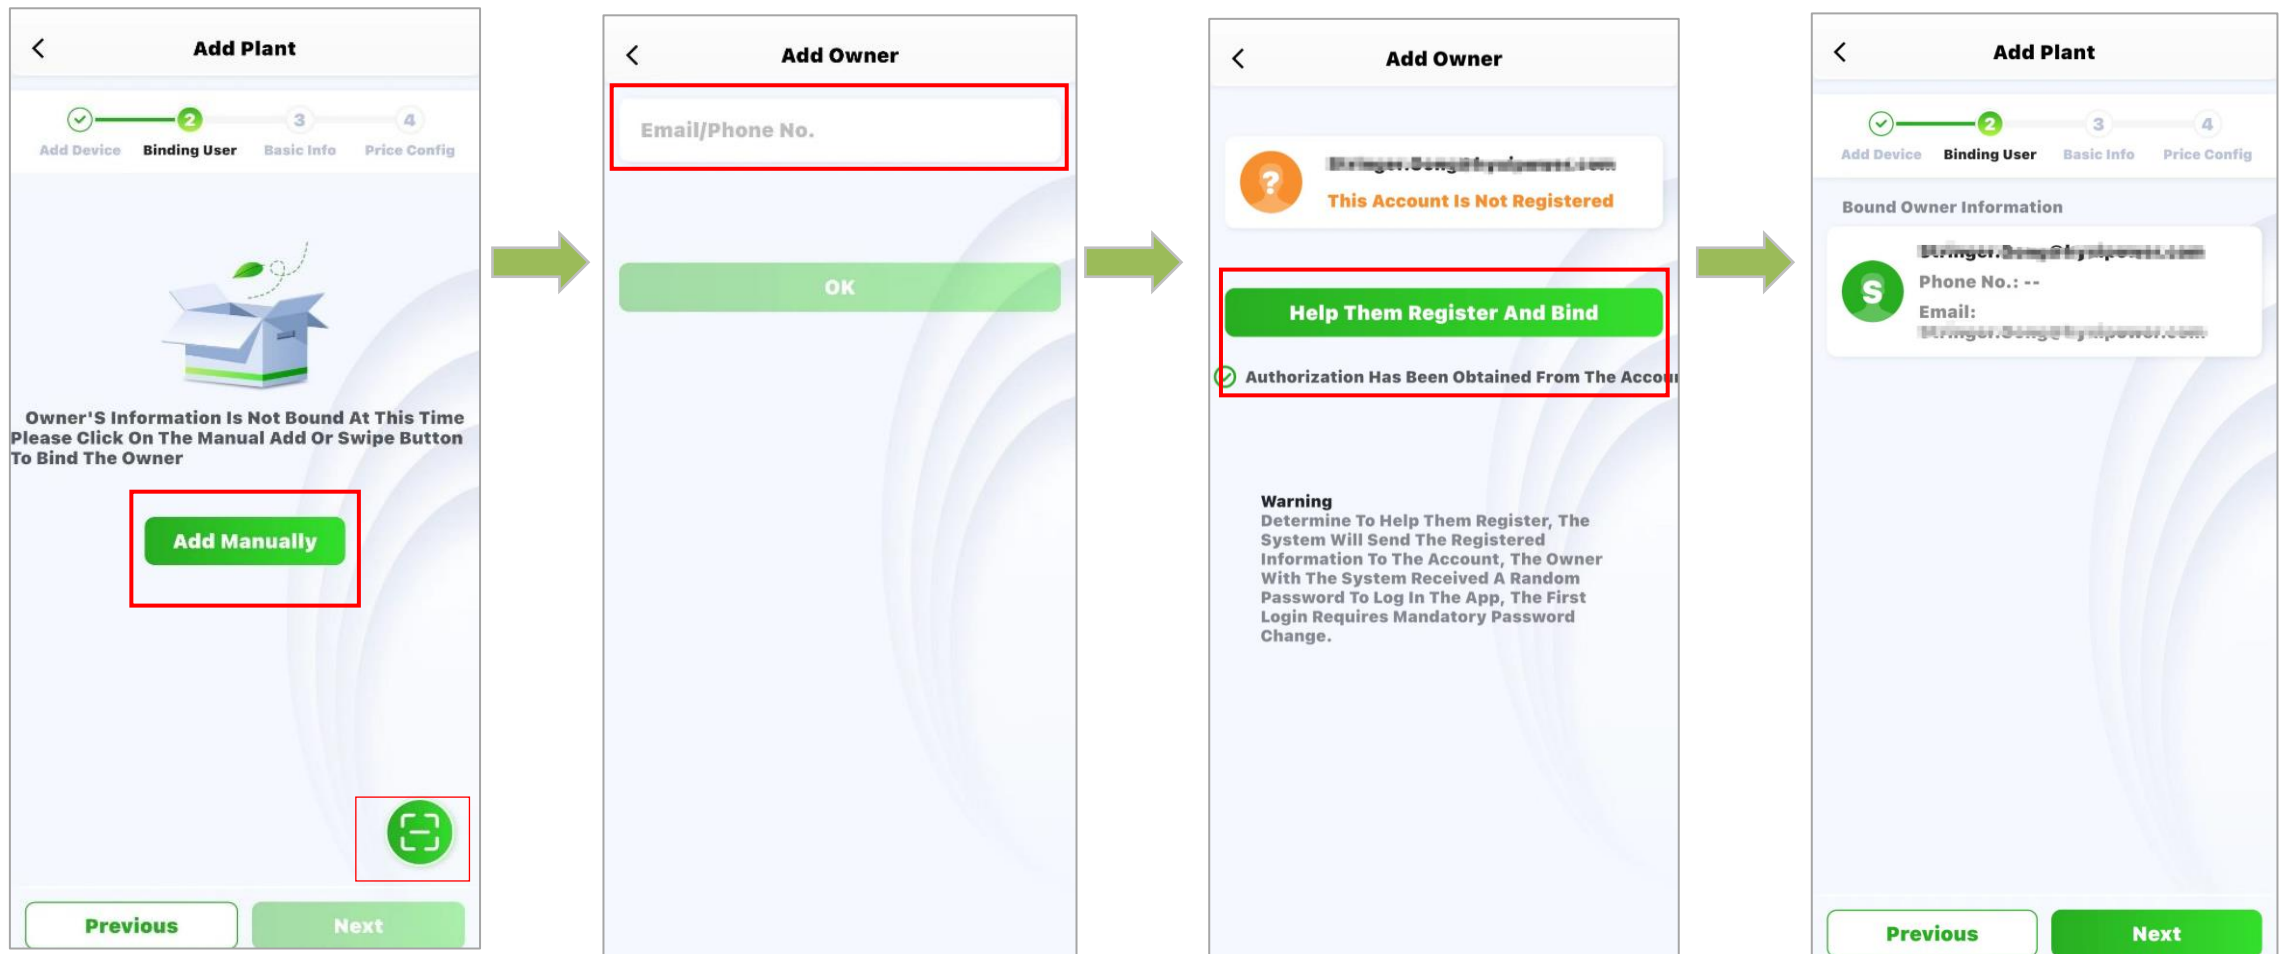


APP Configuration-Create a Plant

Step 5: Fill in basic information including Plant name, Plant type(**Household Use**), Region, Time Zone, and More information including Photovoltaic Installed Capacity, etc.

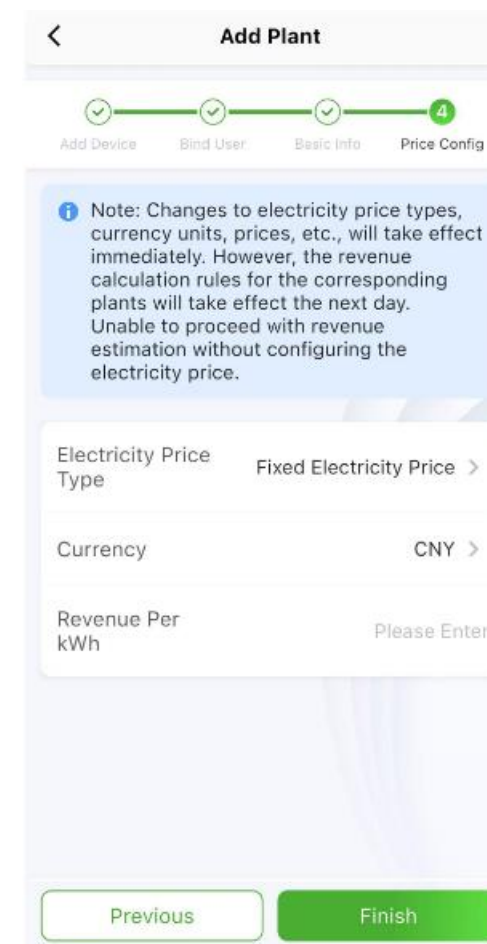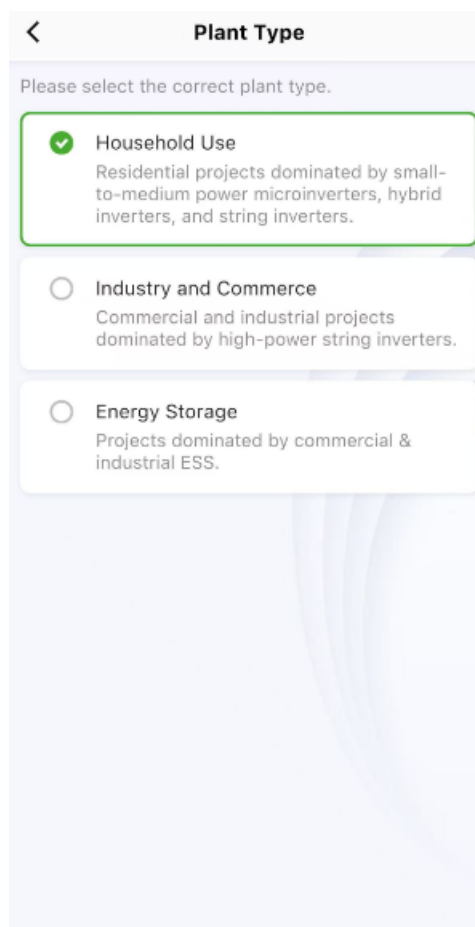

APP Configuration-Create a Plant

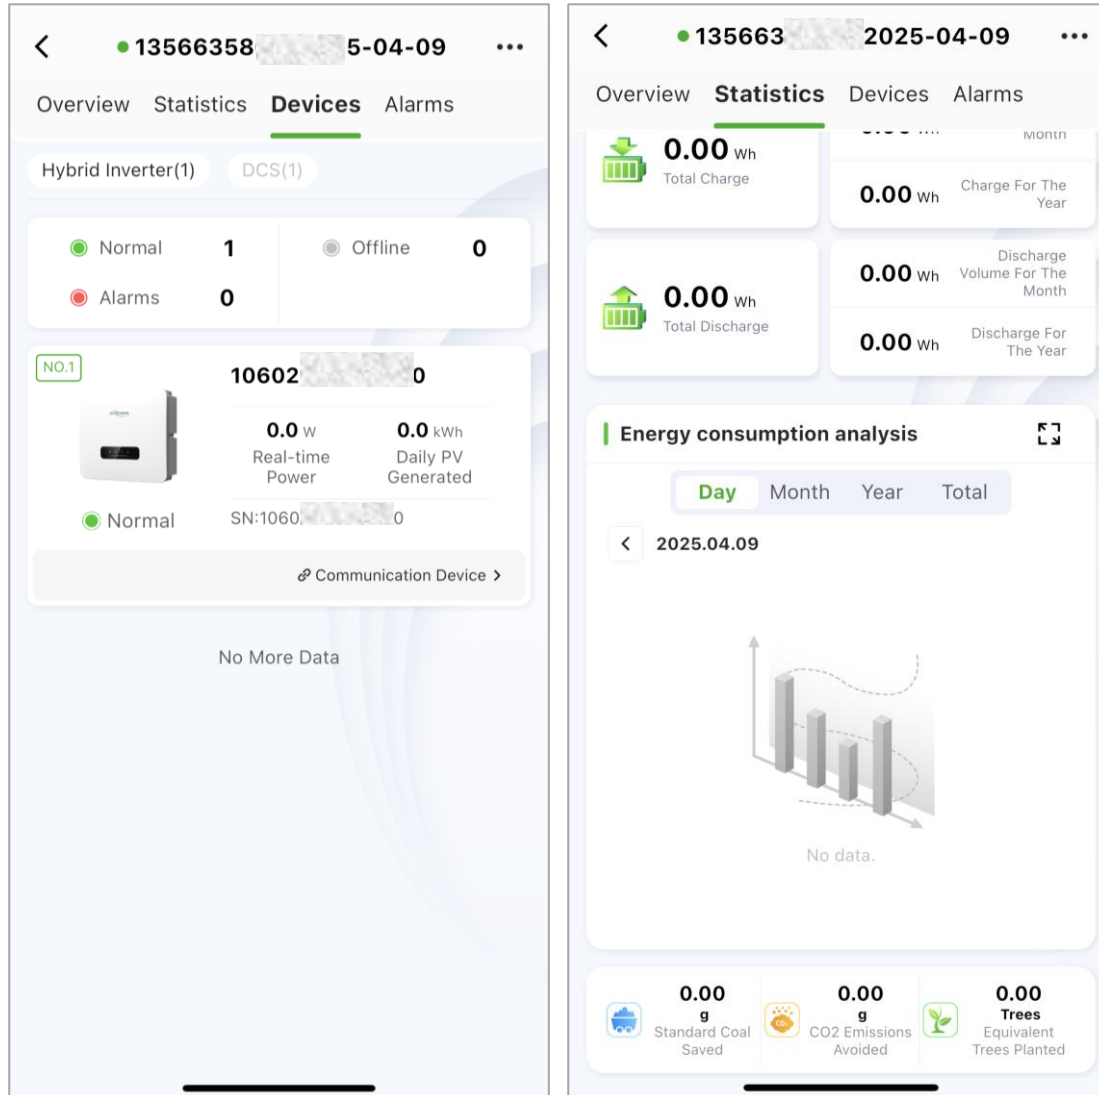

Step1: Select the **plant**, enter the **user's plant interface**, go to the device interface, and ensure the devices are online and functioning normally.

Step2: After installation, continuously monitor for at least 30 minutes. Select **Statistics**, go to the Energy consumption analysis interface, check the real-time power generation curve to confirm the plant has started normal electricity production.

After all the above checks are confirmed normal, it indicates successful installation and commissioning of the equipment!

THANKS

Delivery and Service Center

品质

创新

高效

共赢